XR-3304

SERVICE MANUAL

Saudi Arabia Model

Model Name Using Similar Mechanism	XR-C110
Tape Transport Mechanism Type	MG-36SZ7-32

SPECIFICATIONS

Cassette player section

Tape track	4-track 2-channel stereo
Wow and flutter	0.13 % (WRMS)
Frequency response	30 – 15,000 Hz
Signal-to- noise ratio	55 dB

Tuner section

FM

Tuning range	87.5 – 108.0 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	12 dBf (75 ohms)
Selectivity	70 dB at 400 kHz
Signal-to-noise ratio	63 dB (stereo), 68 dB (mono)
Harmonic distortion at 1 kHz	0.5% (stereo), 0.4% (mono)
Separation	28 dB at 1 kHz
Frequency response	30 – 15,000 Hz
Capture ratio	5 dB

MW/SW

Tuning range	MW tuning interval: 531 – 1,602 kHz SW tuning interval: SWI: 2.940 – 7.735 MHz SWII: 9.500 – 18.135 MHz (except for 10.140 – 11.575 MHz)
Antenna terminal	External antenna connector
Intermediate frequency	450 kHz/10.71MHz
Sensitivity	35 µV

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	20 W × 4 (at 4 ohms)

General

Output lead	Power antenna relay control lead/Power amplifier control lead
Tone controls	Bass ±8 dB at 100 Hz Treble ±8 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 × 58 × 170 mm (w/h/d) not incl. projecting parts and controls
Mounting dimension	Approx. 182 × 53 × 153 mm (w/h/d) not incl. projecting parts and controls
Mass	Approx. 1.3 kg
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1)

Design and specifications are subject to change without notice.

使用時は添付資料も参照のこと
Refer to the additional documents.

FM/MW/SW CASSETTE CAR STEREO

SONY®

TABLE OF CONTENTS

1. GENERAL

Button Locations 3
Setting the Clock 3
Cassette Player Operation 3
Radio Reception 4
Other Functions 5
Connections 6

2. DISASSEMBLY

2-1. Cover 8
2-2. Lock Assy 8
2-3. MD Block 9
2-4. Heat Sink 9
2-5. Main Board 10

3. MECHANICAL ADJUSTMENTS 11

4. ELECTRICAL ADJUSTMENTS

Deck Section 11
Tuner Section 12

5. DIAGRAMS

5-1. IC Pin Description 15
5-2. Printed Wiring Boards 18
5-3. Schematic Diagram 21

6. EXPLODED VIEWS

6-1. Chassis Section 25
6-2. Front Panel Section 26
6-3. Mechanism Section (1) 27
6-4. Mechanism Section (2) 28

7. ELECTRICAL PARTS LIST 29

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Button Locations

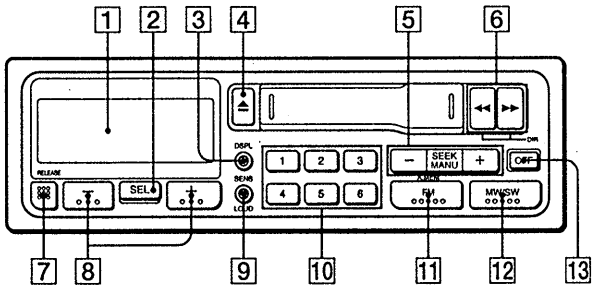

EN

Refer to the pages in ● for details.

1 Display window
2 SEL (control mode select) button ❺❽
3 DSPL (display mode change/time set) button ❺
4 ⏏ (eject) button ❺
5 SEEK/MANU button ❻❼
6 ◀◀ • ▶▶ (fast winding)/DIR (tape transport direction change) buttons ❺❻
7 RELEASE (front panel release) button ❹❽
8 [−] [+] (bass/treble/balance/fader control/volume) buttons ❺❽
9 SENS/LOUD (sensitivity adjust/loudness) button ❻❽
10 During radio reception: Preset number buttons ❼
11 FM/A.MEM (radio on • band select/automatic memory) button ❺❻❼
12 MW/SW (radio on • band select) button ❺❻❼
13 OFF button ❹

Setting the Clock

The clock has a 12-hour digital indication.

For example, setting it to 10:08

1 Press the FM or MW/SW button to turn on the unit.

2 Display the time.
(Press the DSPL button during unit operation.)

3 Press the DSPL button for more than two seconds.

The hour digits blinks.

Set the hour digits.



(to go back) (to go forward)



4 Press the SEL button momentarily.

The minute digits blinks.

Set the minute digits.



(to go back) (to go forward)

5 Press the DSPL button momentarily.



The clock activates.

Note
The clock cannot be set unless the power is turned on. Set the clock after you turn on the radio, or during tape playback.

Cassette Player Operation

Listening to Tape Playback

After inserting the cassette, playback will start automatically.

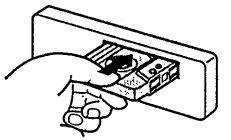

To change the tape direction,
press both the ◀◀ and the ▶▶ buttons at the same time.

Indication of Tape Transport Direction



The side facing up is being played.



The side facing down is being played.

Tape playback automatically changes direction at the end of the tape.

Note
Before turning off the unit, eject the tape to avoid tape damage.

Ejecting the Cassette

Press the ⏏ button to stop playback and eject the cassette.

This section is extracted from instruction manual.

Fast-winding the Tape

Direction indicator*	To advance	To rewind
►		
◄		

To resume playback, press the other fast-winding button partially until the locked button is released.

* *The ◄ or ► indicator flashes while fast-winding the tape.*

EN

Radio Reception

Searching for Stations Automatically

— Automatic Tuning

1 Select the desired band.

FM I ⟷ FM II

MW → SWI → SWII → MW

2 Press either side of the SEEK/MANU button momentarily to search for the next station (automatic tuning).



For lower frequencies



For higher frequencies

The scanning stops when a station is received. Press either side of the button repeatedly until the desired station is received.

When an FM stereo program with sufficient signal strength is tuned in,



the "ST" indication appears.

To keep the automatic tuning from stopping on stations too frequently (local seek mode), press the LOCAL button momentarily to get the "LCL" indication.

Only the stations with relatively strong signals will be tuned in. The local seek mode functions only when the automatic tuning is in operation.

Tuning in by Adjusting the Frequency — Manual Tuning

1 Select the desired band.

FM I ⟷ FM II

MW → SWI → SWII → MW

2 Press and hold either side of the SEEK/MANU button.
Release the button when the desired station is received.



For lower frequencies



For higher frequencies

PREVENT ACCIDENTS!
When tuning in during driving, use automatic tuning or the memory preset tuning instead of manual tuning.

Memorizing Stations Automatically

— Automatic Memory Function

Stations with the clearest reception are automatically searched and memorized on each band (FM I, FM II, MW, SWI and SWII). Up to 6 stations on each band can be stored on the preset number buttons 1 to 6 in the order of band frequency.

1 Select the desired band.

FM I ⟷ FM II

MW → SWI → SWII → MW

2 Press the FM/A.MEM button for more than two seconds.

The unit starts scanning the selected band and memorize the tuned stations on the preset number button 1 through 6 automatically.

Memorizing Only the Desired Stations

1 Select the desired band.

FM I ⟷ FM II

MW → SWI → SWII → MW

2 Tune in the station which you wish to store on the preset number button.

3 Press and hold the desired preset number button (1 to 6) for about two seconds.

The number of the pressed preset number button appears on the display.



Up to 6 stations on each band (FM I, FM II, MW, SW I and SW II) can be stored on the preset number buttons in the order of your choice. Therefore, 12 stations can be memorized on FM.
If you try to store another station on the same preset number button, the previously stored station is erased.

Receiving the Memorized Stations

1 Select the desired band.

FM I ⟷ FM II

MW → SWI → SWII → MW

2 Press momentarily the preset number button on which the desired station is stored.

Note
If you press the preset number button for more than two seconds, the currently received station is memorized. To receive the previously memorized station, make sure that the preset number button is pressed only momentarily.

EN

Other Functions

Adjusting the Sound Characteristics

1 Select the item you want to adjust by pressing the SEL button repeatedly.

BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader) → VOL (volume) → BAS (bass)

2 Adjust the selected item by pressing either the − or + button.

Adjust within three seconds after selecting. (After three seconds the buttons will again serves as the volume control buttons.)

Enjoying Bass and Treble at Low Volume

— Loudness Function

Press the SENS button for more than two seconds. → LOUD "LOUD" will appear on the display.

The bass and treble are boosted. To cancel, press again.

Maintenance

Fuse Replacement

When replacing the fuse, be sure to use one matching the amperage rating stated on the fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

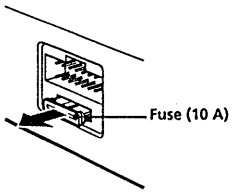

Warning

Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

Cleaning the Connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, open the front panel by pressing the RELEASE button, then detach it and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.

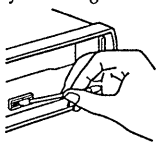

Main unit



Back of the front panel

Dismounting the Unit

1

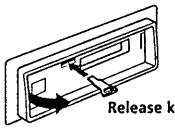

Release key (supplied)

2

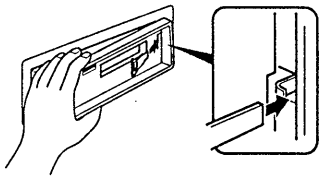

3

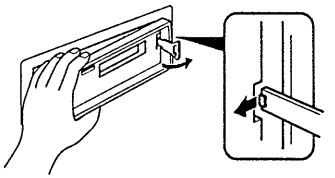

4

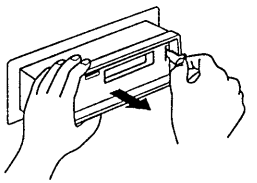

EN

Connections

التوصيلات

Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the **yellow** and **red** power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- **Run all earth wires to a common earth point.**

تنبيه

- هذه الوحدة مصممة للتشغيل على التيار المباشر ١٢ فولت بتاريض سالب فقط.
- قبل عمل التوصيلات، إفصل طرف توصيل الارضي لبطارية السيارة لتفادي حدوث تماس كهربي.
- قم بتوصيل اسلاك دخل التيار **الاصفر والاحمر** بعد الانتهاء من توصيل جميع الاسلاك الاخرى.
- تأكد من توصيل سلك دخل التيار الاحمل بطرف التيار ١٢ فولت الموجب الذي يعمل عندما يكون مفتاح تشغيل المحرك في الوضع الثانوي.
- **قم بتوصيل جميع اسلاك التاريض بنقطة تاريض مشتركة.**

Reset Button

When the installation and connections are over, be sure to press the reset button with a ball-point pen etc.

زر اعادة التهيئة

عند الانتهاء من التركيب والتوصيلات، تأكد من ضغط زر إعادة التهيئة باستعمال قلم جاف، إلخ.

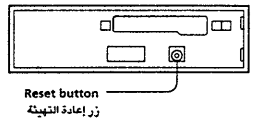

Note for Connecting

If there is alternator noise (a whining sound when raising engine speed), earth the master unit by connecting it to a metal point of the car with the supplied chassis earth cord ⑧. Connect the ground cord to the master unit with part ② as shown in the illustration. (In case you do not use part ②, take screw ⑦ instead.)

ملاحظة حول التوصيل

اذا كانت هناك ضوضاء من المناوب (صوت عند زيادة سرعة المحرك)، قم بتاريض الوحدة الرئيسية بتوصيلها بنقطة معدنية في السيارة باستعمال سلك تأريض الشاسيه ⑧ المجهز. قم بتوصيل سلك التأريض بالوحدة الرئيسية بالقطعة ② كما هو مبين بالرسم التوضيحي (في حالة عدم استخدام القطعة ②، خذ البرغي ⑦ بدلا عنه)

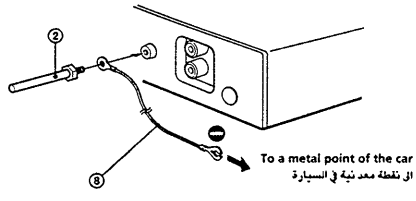

Connection Example

مثال على التوصيل

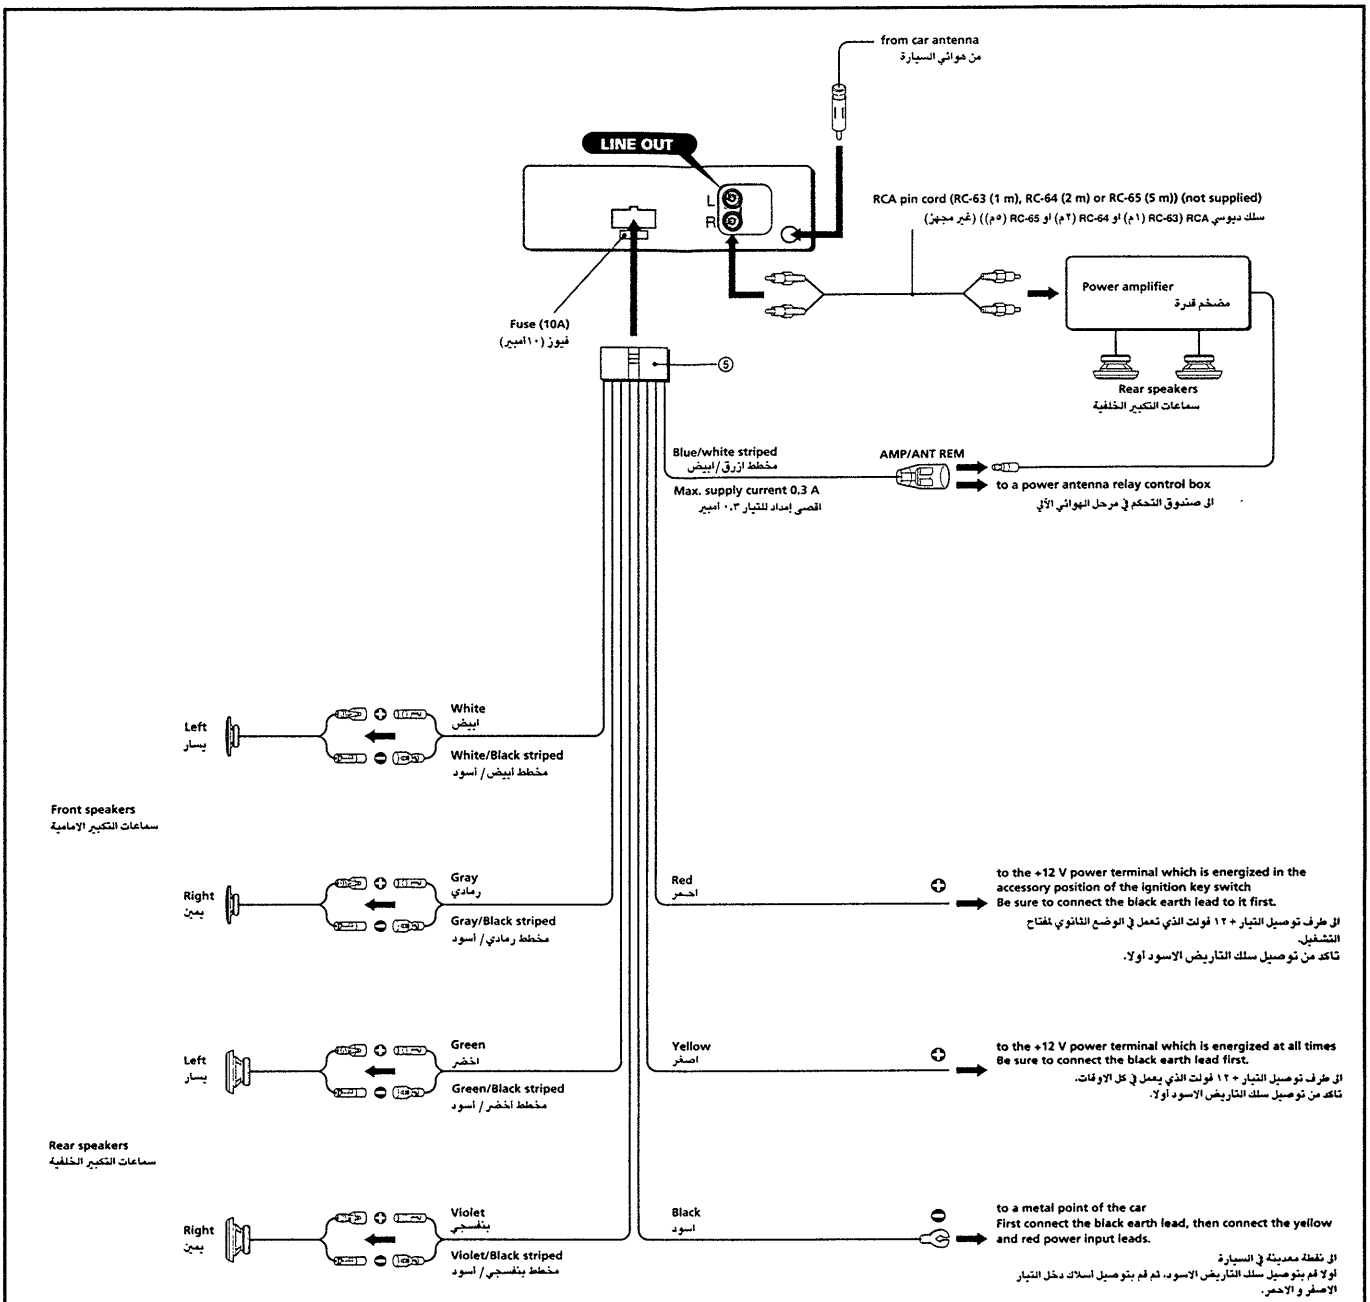
from car antenna
من هوائي السيارة
LINE OUT
L
R
RCA pin cord (RC-63 (1 m), RC-64 (2 m) or RC-65 (5 m)) (not supplied)
سلك ديوسي RCA (RC-63 (١م) او RC-64 (٢م) او RC-65 (٥م)) (غير مجهز)
Power amplifier
مضخم قدرة
Fuse (10A)
فيوز (١٠امبير)
Rear speakers
سماعات التكبير الخلفية
Blue/white striped
مخطط ازرق/ابيض
AMP/ANT REM
Max. supply current 0.3 A
اقصى إمداد للتيار ٠.٣ امبير
to a power antenna relay control box
الى صندوق التحكم في مرحل الهوائي الآلي
Left
يسار
White
ابيض
White/Black striped
مخطط ابيض / اسود
Front speakers
سماعات التكبير الامامية
Right
يمين
Gray
رمادي
Gray/Black striped
مخطط رمادي / اسود
Red
احمر
to the +12 V power terminal which is energized in the accessory position of the ignition key switch
Be sure to connect the black earth lead to it first.
الى طرف توصيل التيار + ١٢ فولت الذي تعمل في الوضع الثانوي لمفتاح التشغيل.
تاكد من توصيل سلك التاريض الاسود أولا.
Left
يسار
Green
اخضر
Green/Black striped
مخطط اخضر / اسود
Yellow
اصفر
to the +12 V power terminal which is energized at all times
Be sure to connect the black earth lead first.
الى طرف توصيل التيار + ١٢ فولت الذي يعمل في كل الاوقات.
تاكد من توصيل سلك التاريض الاسود أولا.
Rear speakers
سماعات التكبير الخلفية
Right
يمين
Violet
بنفسجي
Violet/Black striped
مخطط بنفسجي / اسود
Black
اسود
to a metal point of the car
First connect the black earth lead, then connect the yellow and red power input leads.
الى نقطة معدنية في السيارة
اولا قم بتوصيل سلك التاريض الاسود، ثم قم بتوصيل اسلاك دخل التيار الاصفر و الاحمر.

Notes on the control leads

- *The power antenna control lead (blue/white striped) supplies +12 V DC when you turn on the unit.*
- *A power antenna without relay box cannot be used with this unit.*

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

Notes on speaker connection

- *Before connecting the speakers, turn the unit off.*
- *Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.*
- *Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.*
- *Do not attempt to connect the speakers in parallel.*
- *Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.*

ملاحظات حول اسلاك التحكم

- *سلك التحكم في الهوائي الآلي (مخطط ازرق/ابيض) يقوم بامداد تيار مباشر ١٢+ فولت عند تشغيل الوحدة*
- *لا يمكن استعمال هوائي آلي بدون صندوق مرحل مع هذه الوحدة*

توصيلة حفظ محتويات الذاكرة

عند توصيل سلك دخل التيار الاصفر، يتم دائماً إمداد التيار الى دائرة الذاكرة عندما يكون مفتاح تشغيل المحرك في وضع الايقاف

ملاحظات حول توصيل سماعات التكبير

- *قبل توصيل سماعات التكبير، اوقف تشغيل الوحدة.*
- *إستعمال سماعات تكبير بمعاوقة من ٤ الى ٨ أوم، وسعة تحمّل قدرة كافية اذا لم تكن كذلك، يمكن لسماعات التكبير ان تتلف*
- *لا تعمد الى توصيل اطراف توصيل سماعات التكبير بهيكل السيارة ولا تعمد الى توصيل اطراف توصيل السماعة اليمنى بتلك الخاصة بالسماعة اليسرى.*
- *لا تحاول توصيل سماعات التكبير على التوازي.*
- *لا تعمد الى توصيل اي سماعات تكبير نشطة (مجهز بمضخم داخلي) باطراف توصيل سماعات التكبير في الوحدة ان هذا العمل يمكن ان يتلف سماعات التكبير النشطة لذا تاكد من توصيل سماعات تكبير غير نشطة بهذه الاطراف.*

SECTION 2
DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. COVER

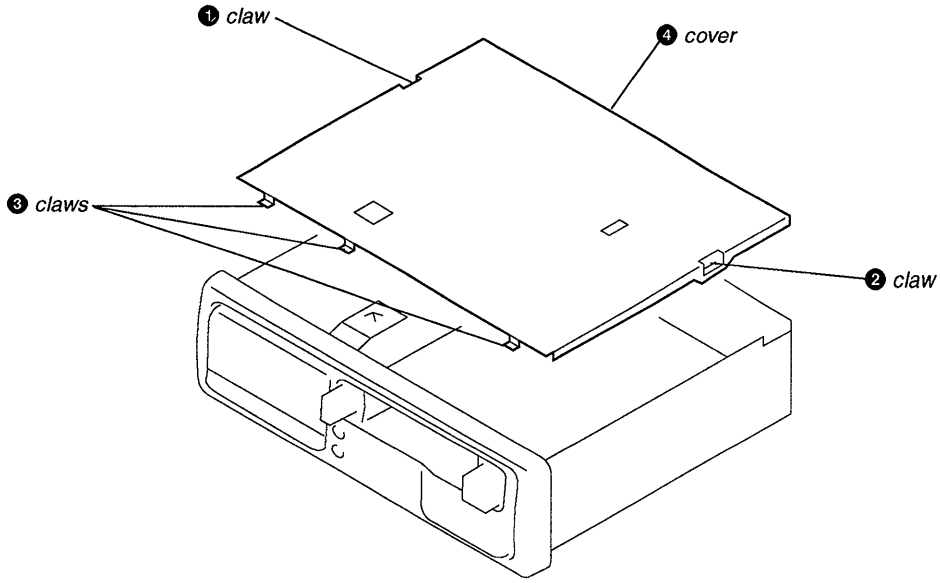

2-2. LOCK ASSY

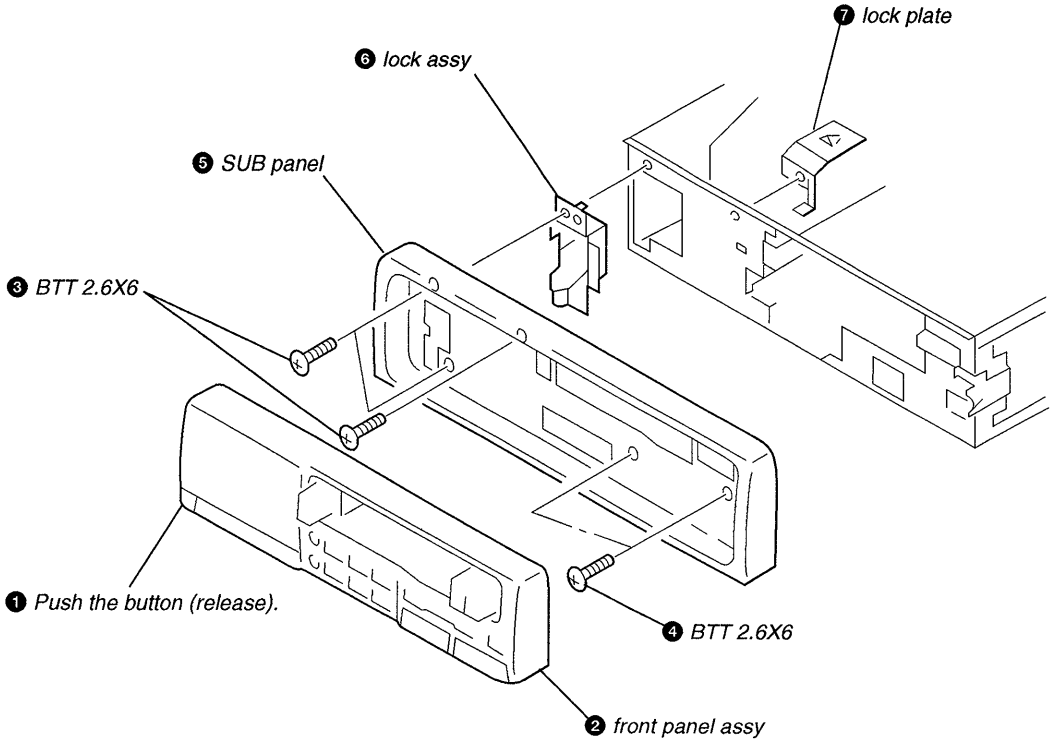

2-3. MD BLOCK

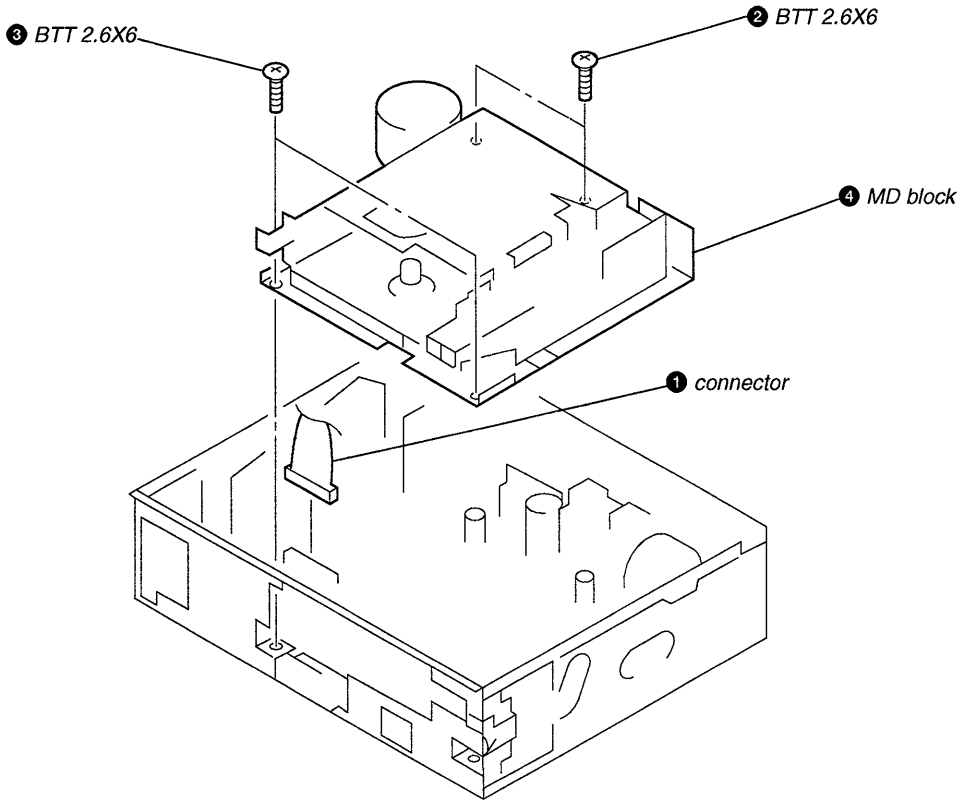

2-4. HEAT SINK

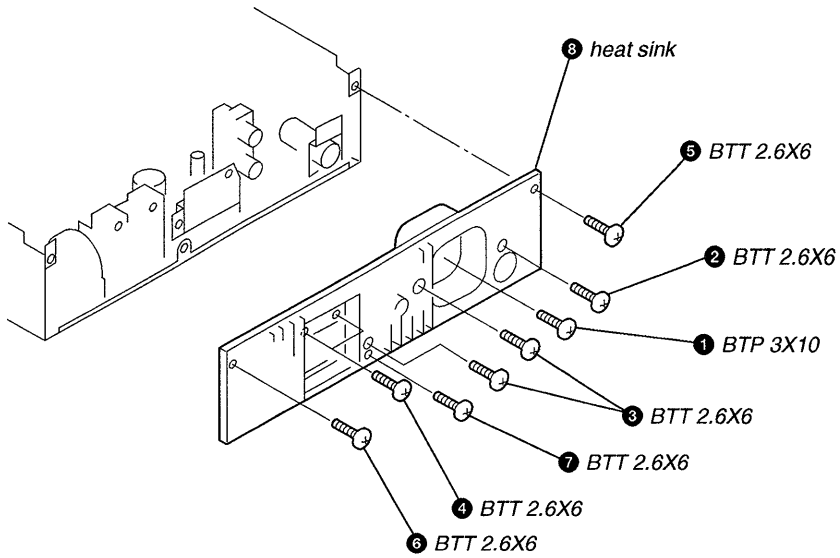

2-5. MAIN BOARD

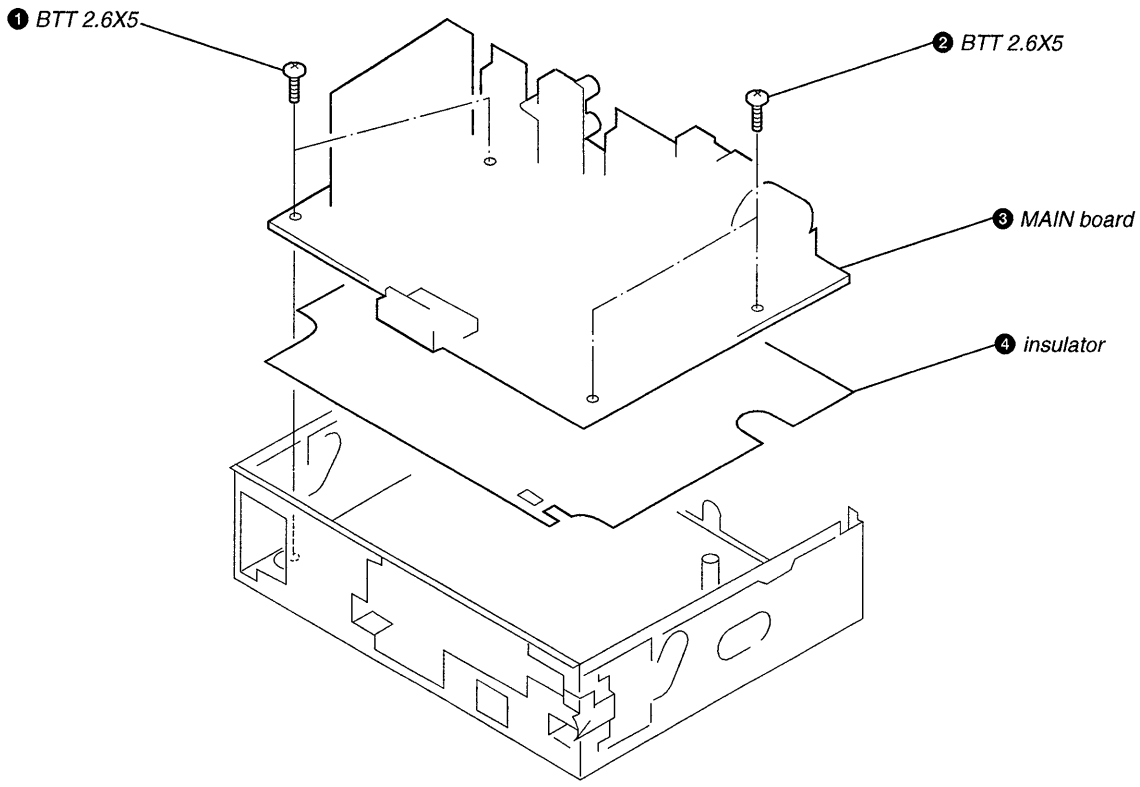

SECTION 3
MECHANICAL ADJUSTMENTS

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment :
   PB head — Pinch roller
   Idler — Rubber belt
   Capstan
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After the adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4 V).

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	25 – 55 g•cm (0.35 – 0.76 oz•inch)
FWD Back Tension		1.5 – 4 g•cm (0.02 – 0.06 oz•inch)
REV	CQ-102RC	25 – 55 g•cm (0.35 – 0.76 oz•inch)
REV Back Tension		1.5 – 4 g•cm (0.02 – 0.06 oz•inch)
FF, REW	CQ-201B	50 – 150 g•cm (0.69 – 2.08 oz•inch)

SECTION 4
ELECTRICAL ADJUSTMENTS

DECK SECTION **0 dB = 0.775 V**

1. The adjustments should be performed in the order given in this service manual.
2. The adjustments should be performed for both L-CH and R-CH.

Test Tape

Type	Signal	Used for
P-4-A063	6.3 kHz, –10 dB	head azimuth adjustment
WS-48A	3 kHz, 0 dB	tape speed adjustment

PB Head Azimuth Adjustment

Procedure :

1. Put the set into the FWD PB mode.

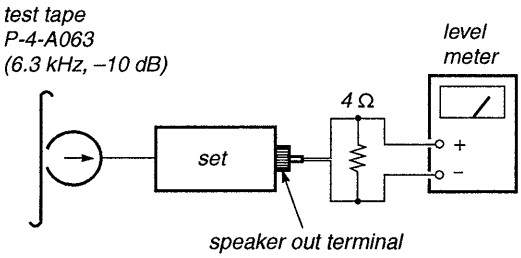

2. Turn the screw and check the output peak value. Adjust the screw so that the peak value in channels L and R coincides within 2 dB.

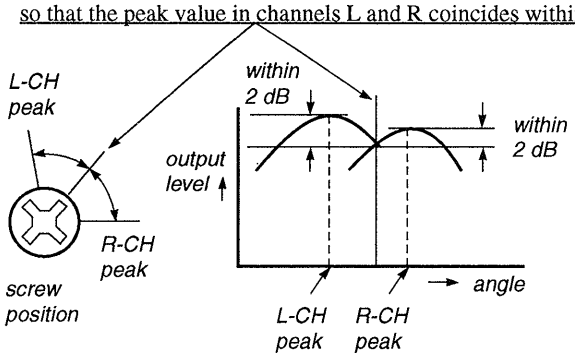

3. Check the phase in the FWD PB mode.

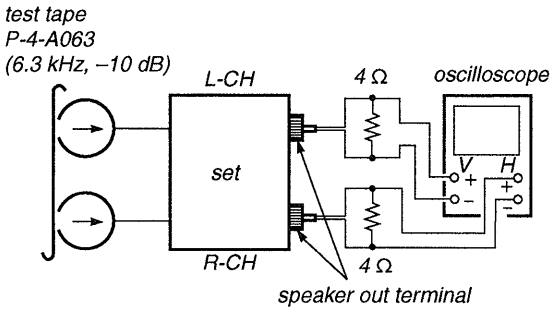

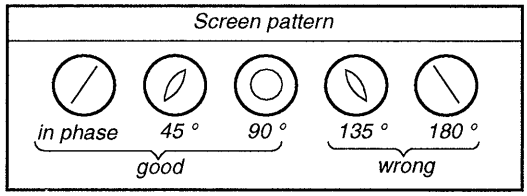

4. Repeat the above adjustment for the REV PB mode.
5. Check that output level difference between FWD PB mode and REV PB mode is within 4 dB.

Adjustment Location :

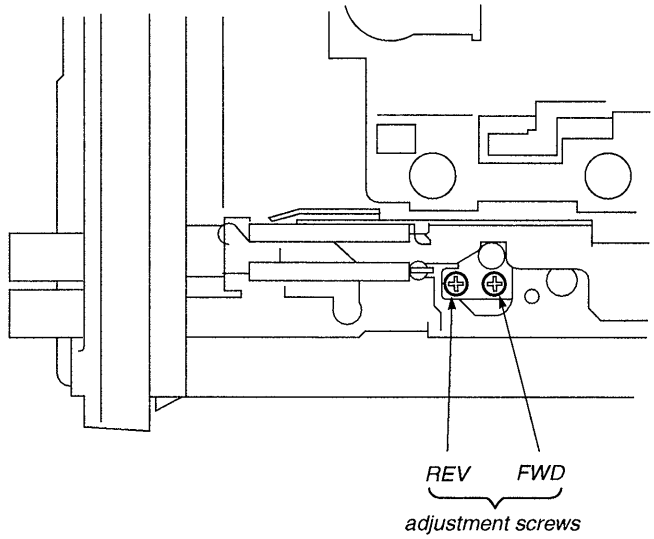

Tape Speed Adjustment

Setting :

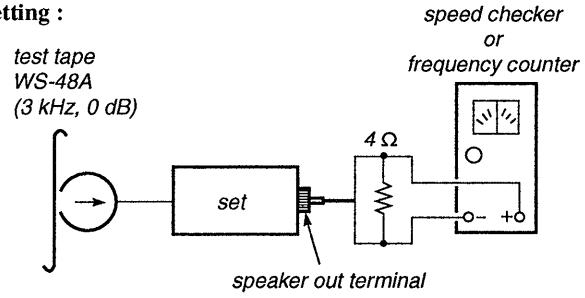

Procedure :

1. Put the set into the FWD PB mode.
2. Adjust adjustment resistor for inside capstan motor so that the reading on the speed checker or frequency counter becomes in specification.

Specification : Constant speed

Speed checker	Frequency counter
– 1.5 to + 0.5 %	2,955 to 3,015 Hz

Adjustment Location :

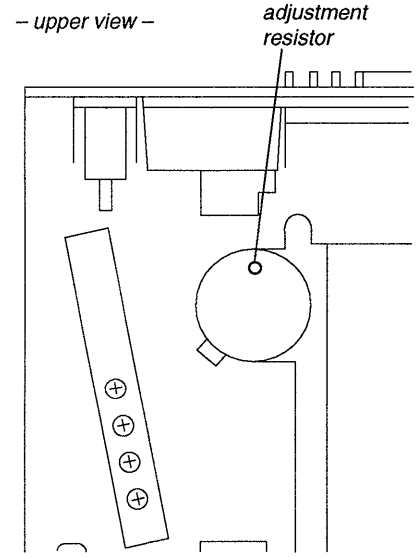

TUNER SECTION | **0 dB = 1 µV**

Cautions during repair

When the tuner unit is defective, replace it by a new one because its internal block is difficult to repair.

TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/ Stop Level and MW Auto Scan/Stop Level adjustments can be performed easier than it in ordinary procedure.

<Set the Test Mode>

1. Set the "OFF" mode.
2. Push the preset [1] button.
3. Press the [OFF] button while pressing the [FM] button. (Then the display indicates all lights, the test mode is set.)

<Release the Test mode>

1. Push the [OFF] button.

FM Auto Scan/Stop Level Adjustment

Note : Be sure to perform this adjustment before "MW Auto Scan/ Stop Level Adjustment".

Setting :

FM button : FMI

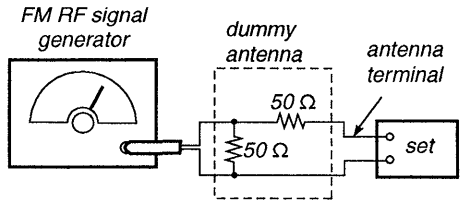

Carrier frequency : 98.0 MHz
Output level : 22 dB (12.6 µV)
Mode : mono
Modulation : 1 kHz, 75 kHz deviation (100 %)

Procedure :

1. Set to the test mode.
2. Push the [FM] button and set to FMI.

LCD display

3. Adjust with the volume RV2 on ET201 like to appear the ST indicator of LCD display.

LCD display

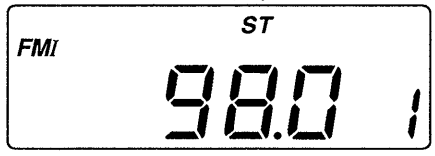

Adjustment Location : See page 14.

FM Noise Focus Adjustment

Setting :

FM button : FMI

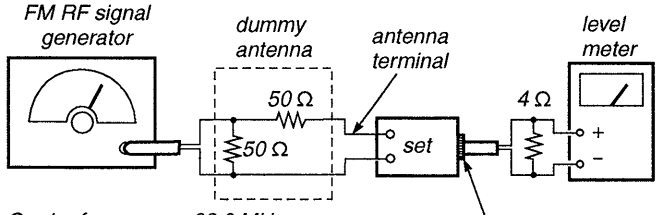

Carrier frequency : 98.0 MHz
Output level : 60 dB (1 mV)
Mode : mono
Modulation : 1 kHz, 75 kHz deviation (100 %)

Procedure:

1. Tune the set to 98.0 MHz.
2. The then output level is supposing that (A) dB.
3. Adjust with the volume RV3 on ET201 so that the output level is (A) – 31 dB then signal generator input set to – 20 dB.

Adjustment Location : See page 14.

FM Stereo Separation Adjustment

Setting :

FM button : FMI

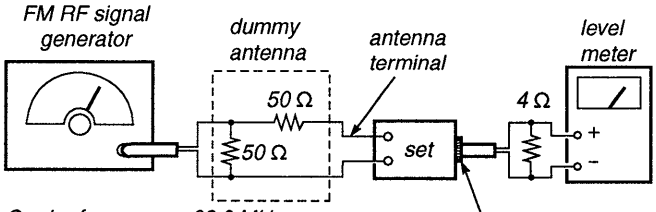

Carrier frequency : 98.0 MHz
Output level : 70 dB (3.2 mV)
Mode : stereo
Modulation : main : 1 kHz, 33.75 kHz deviation (45 %)
sub : 1 kHz, 33.75 kHz deviation (45 %)
pilot : 1kHz, 7.5kHz deviation (10 %)

Procedure :

FM stereo signal generator output channel	Level meter connection	Level meter reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjustment RV4 on ET201 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjustment RV4 on ET201 for minimum reading.

L-CH Stereo separation : Ⓐ – Ⓑ
R-CH Stereo separation : Ⓒ – Ⓓ
The separations of both channels should be equal.

Specification : Separation more than 27 dB

Adjustment Location : See page 14.

MW Auto Scan/Stop Level Adjustment

Setting :

MW/SW button : MW

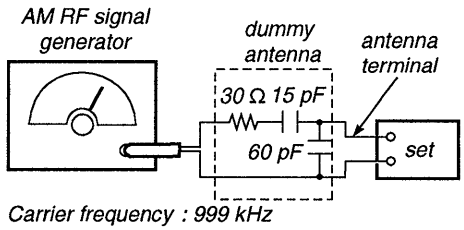

Carrier frequency : 999 kHz
Output level : 33 dB (44.7 µV)
Modulation : 400 Hz, 22.5 kHz deviation (30 %)

Procedure :

1. Set to the test mode. (See page 12.)
2. Push the [MW/SW] button and set to MW.

LCD display

3. Push the [SEL] button and set to MODE1.

LCD display

4. Adjust with the volume RV1 on ET201 like to appear the ST indicator of LCD display.

LCD display

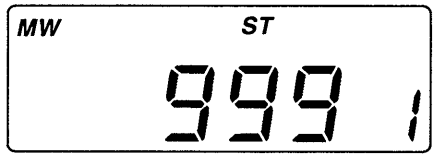

Adjustment Location : See page 14.

Adjustment Location :

– set upper view –

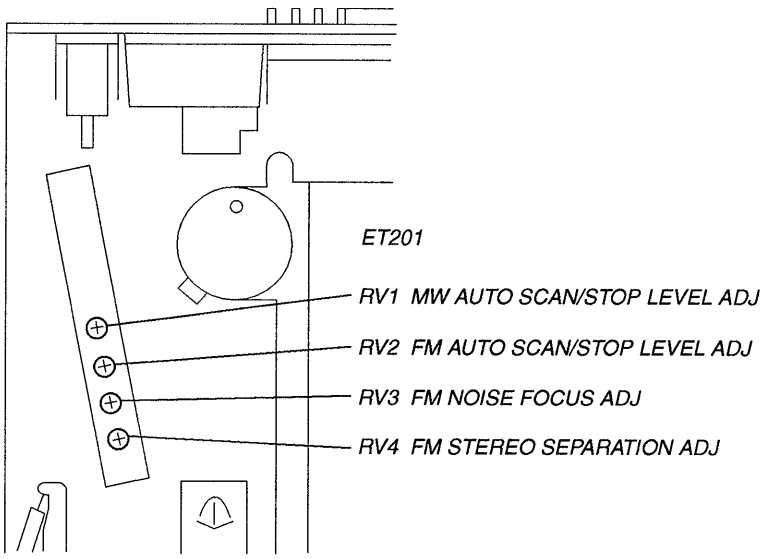

SECTION 5
DIAGRAMS

5-1. IC PIN DESCRIPTION

• IC701 LC72356-9241 (System Controller)

Pin No.	Pin Name	I/O	Pin Description
1	XIN	I	4.5 MHz crystal oscillator input pin
2	TEST2	I	LSI test pin (Fixed at "L" in this set.)
3	SEEK	O	SEEK control output pin ("L" : NORMAL, "H" : SEEK)
4	MW/$\overline{SW}$	O	BAND select output pin ("L" : SW, "H" : MW)
5	AM	O	AM band select output pin
6	FM	O	FM band select output pin
7	LOCAL	O	LOCAL control output pin ("L" : DX, "H" : LOCAL)
8	VOL SO	O	Serial data output pin for volume.
9	VOL CK	O	Serial clock output pin for volume.
10	CDC EN	O	CD select button with/without setting pin (Fixed at "L" in this set.)
11	CDC SI	I	Serial data input pin for SONY BUS. (Fixed at "L" in this set.)
12	CDC SO	O	Serial data output pin for SONY BUS. (Not used in this set.)
13	CDC CLK	O	Serial clock output pin for SONY BUS. (Not used in this set.)
14	—	O	Not used. (Connect to GND.)
15	MUTE	O	Mute output pin
16	$\overline{AMP\ MUTE}$	O	Audio control output pin (Mute)
17	$\overline{BUS\ RST}$	O	Bus reset output pin for SONY BUS. ("L" : RESET) (Not used in this set.)
18	$\overline{BUS\ ON}$	O	Bus control output pin for SONY BUS. ("L" : ON) (Not used in this set.)
19-25	—	O	Not used. (Open)
26	A.STBY	O	Audio control output pin
27	FOR/$\overline{REV}$	I	Forward/reverse detection input pin ("L" : REV, "H" : FOR)
28	$\overline{WIND}$	I	Tape Fast Forward/Rewind detection input pin ("H" : NORMAL, "L" : WIND)
29	RA/$\overline{TA}$	I	Radio/tape mode detection input pin ("H" : RADIO, "L" : TAPE)
30	$\overline{TEST}$	I	Test mode wake-up input pin
31	VDD	—	Power supply pin (5 V ± 5 %)
32	$\overline{ACC\ CHK}$	I	Accessory detection input pin ("L" : ACC ON)
33	MOTOR	O	Motor control output pin
34	POWER ON	O	Power control output pin
35	LAMP ON	O	Illumination lamp control output pin
36-43	—	O	Not used. (Open)
44	BEEP	O	Caution alarm output pin
45	LCD CE	O	Chip enable output pin for LCD driver.
46	LCD CLK	O	Serial clock output pin for LCD driver.
47	LCD SO	O	Serial data output pin for LCD driver.
48	$\overline{LCD\ INH}$	O	Display light off control output pin for LCD driver. (Normally, "L" : All light off)
49	$\overline{PANEL}$	I	Input pin for detecting mounting of front panel. ("L" : ON, "H" : OFF)
50	OIRT EN	I	Setting input pin for East European model. (Fixed at "H" in this set.)
51	LW EN	I	LW band with/without select pin (Fixed at "L" in this set.)
52	SDK EN	I	Traffic information function select pin (Fixed at "H" in this set.)
53	10k EN	I	Frequency select switch select pin (Fixed at "L" in this set.)
54	P.SEL	I	Illumination light ON/OFF select pin at Power off. (Fixed at "L" in this set.)
55	BAT CHK	I	Battery detection input pin ("H" : Battery ON)
56	$\overline{RESET}$	I	System reset input pin
57	—	O	Not used. (Open)
58	$\overline{MONO}$	—	Not used. (Open)
59, 60	SEL B, SEL A	O	Audio source select output pin
61-63	ADC2-ADC0	I	Key input pin

Pin No.	Pin Name	I/O	Pin Description
64	—	O	Not used. (Connect to VDD.)
65	DK	I	DK signal input pin (Fixed at "H" in this set.)
66	ST	I	FM STEREO signal input pin
67	$\overline{\text{HOLD}}$	I	HOLD pin (PLL and CLOCK STOP control) (Fixed at "H" in this set.)
68	$\overline{\text{SNS}}$	I	Power fail detection pin (Connect to VDD.)
69	SD	I	SD station detect input pin
70	IF	I	IF count input pin (FM = 10.7 MHz, MW = 450 kHz)
71	EO3	O	2nd PLL error output pin (Not used in this set.)
72	SUBPD	O	Sub error output pin (For High speed lock up) (Not used in this set.)
73	VDD	—	Power supply pin (5 V ± 5 %)
74	AM IN	I	AM VCO input pin (Fixed at "L" in this set.)
75	FM IN	I	FM VCO input pin
76	GND	—	GND
77	EO2	O	PLL error output pin (Not used in this set.)
78	EO1	O	PLL error output pin
79	TEST1	I	LSI test pin (Fixed at "L" in this set.)
80	XOUT	O	4.5 MHz crystal oscillator output pin

• **IC Block Diagrams**

IC401 TDA7314S

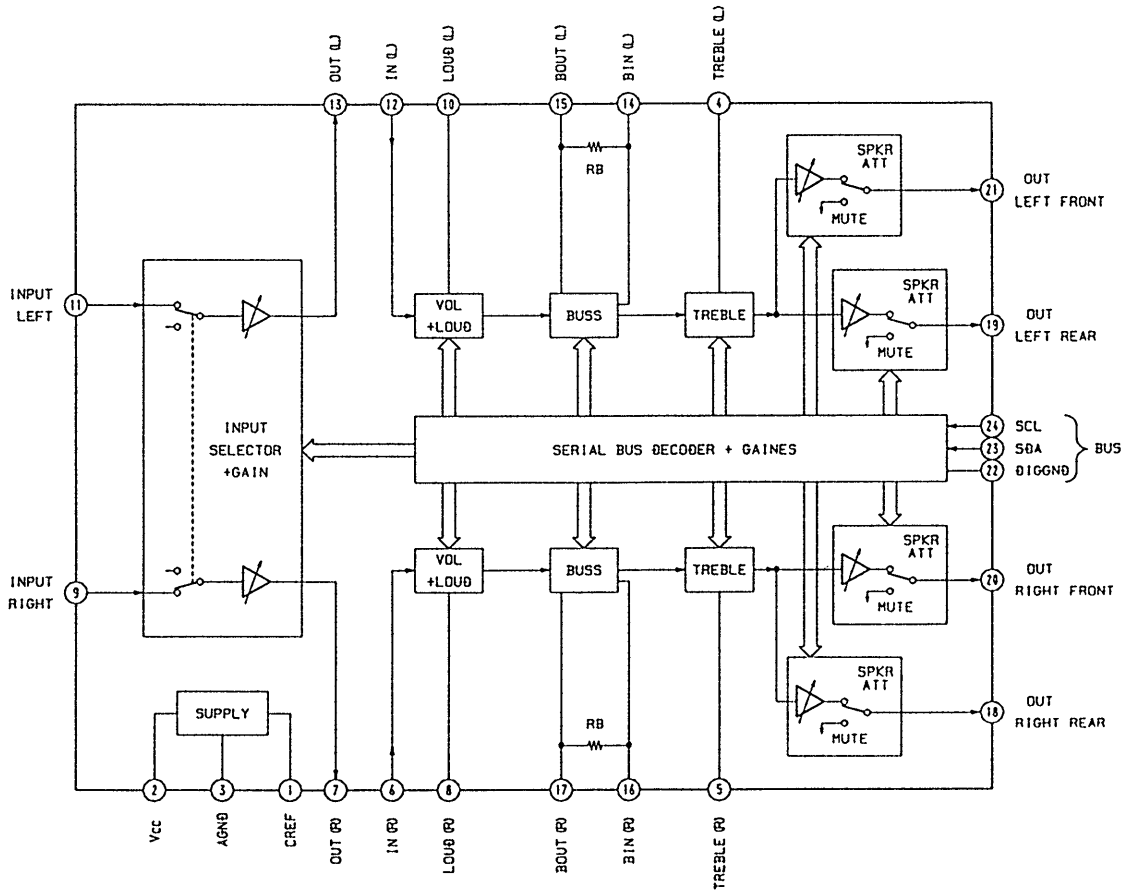

IC501 HA13153

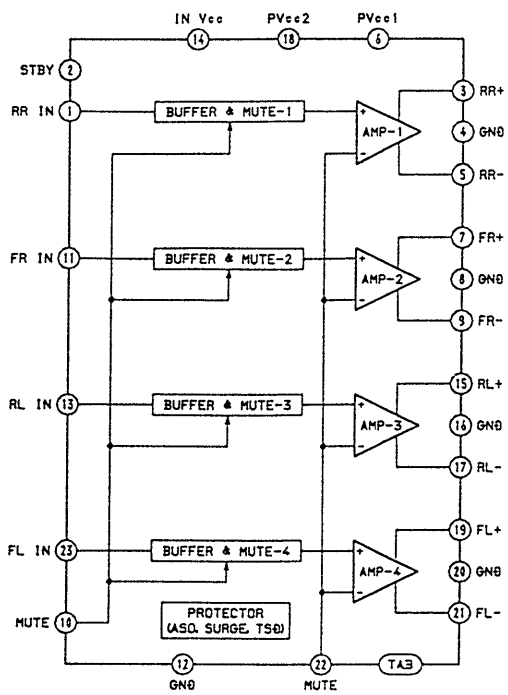

5-2. PRINTED WIRING BOARDS

• **Semiconductor Location**

Ref. No.	Location
D202	E-11
D301	F-8
D501	C-5
D601	E-2
D602	C-2
D604	D-3
D606	F-1
D607	I-4
D621	C-3
D622	B-2
D711	I-4
D712	I-5
D713	I-5
D714	H-7
D715	H-7
D716	H-7
D717	I-4
D718	I-4
D719	I-4
D771	D-1
D801	H-20
D802	H-20
D803	H-18
D804	H-19
D805	H-19
IC301	F-7
IC401	E-5
IC451	D-7
IC481	E-8
IC501	B-6
IC701	G-4
IC801	G-19
Q201	E-9
Q202	E-9
Q203	F-10
Q205	E-9
Q206	E-10
Q207	F-10
Q301	E-3
Q302	E-3
Q501	D-6
Q502	C-7
Q503	C-7
Q504	D-6
Q505	D-3
Q506	D-4
Q507	D-4
Q601	F-2
Q603	D-3
Q604	F-3
Q605	F-2
Q606	F-2
Q621	C-3
Q622	C-3
Q701	F-5
Q702	F-6
Q771	E-2
Q772	E-2

Note :
- ○— : parts extracted from the component side.
- —— : parts extracted from the conductor side.

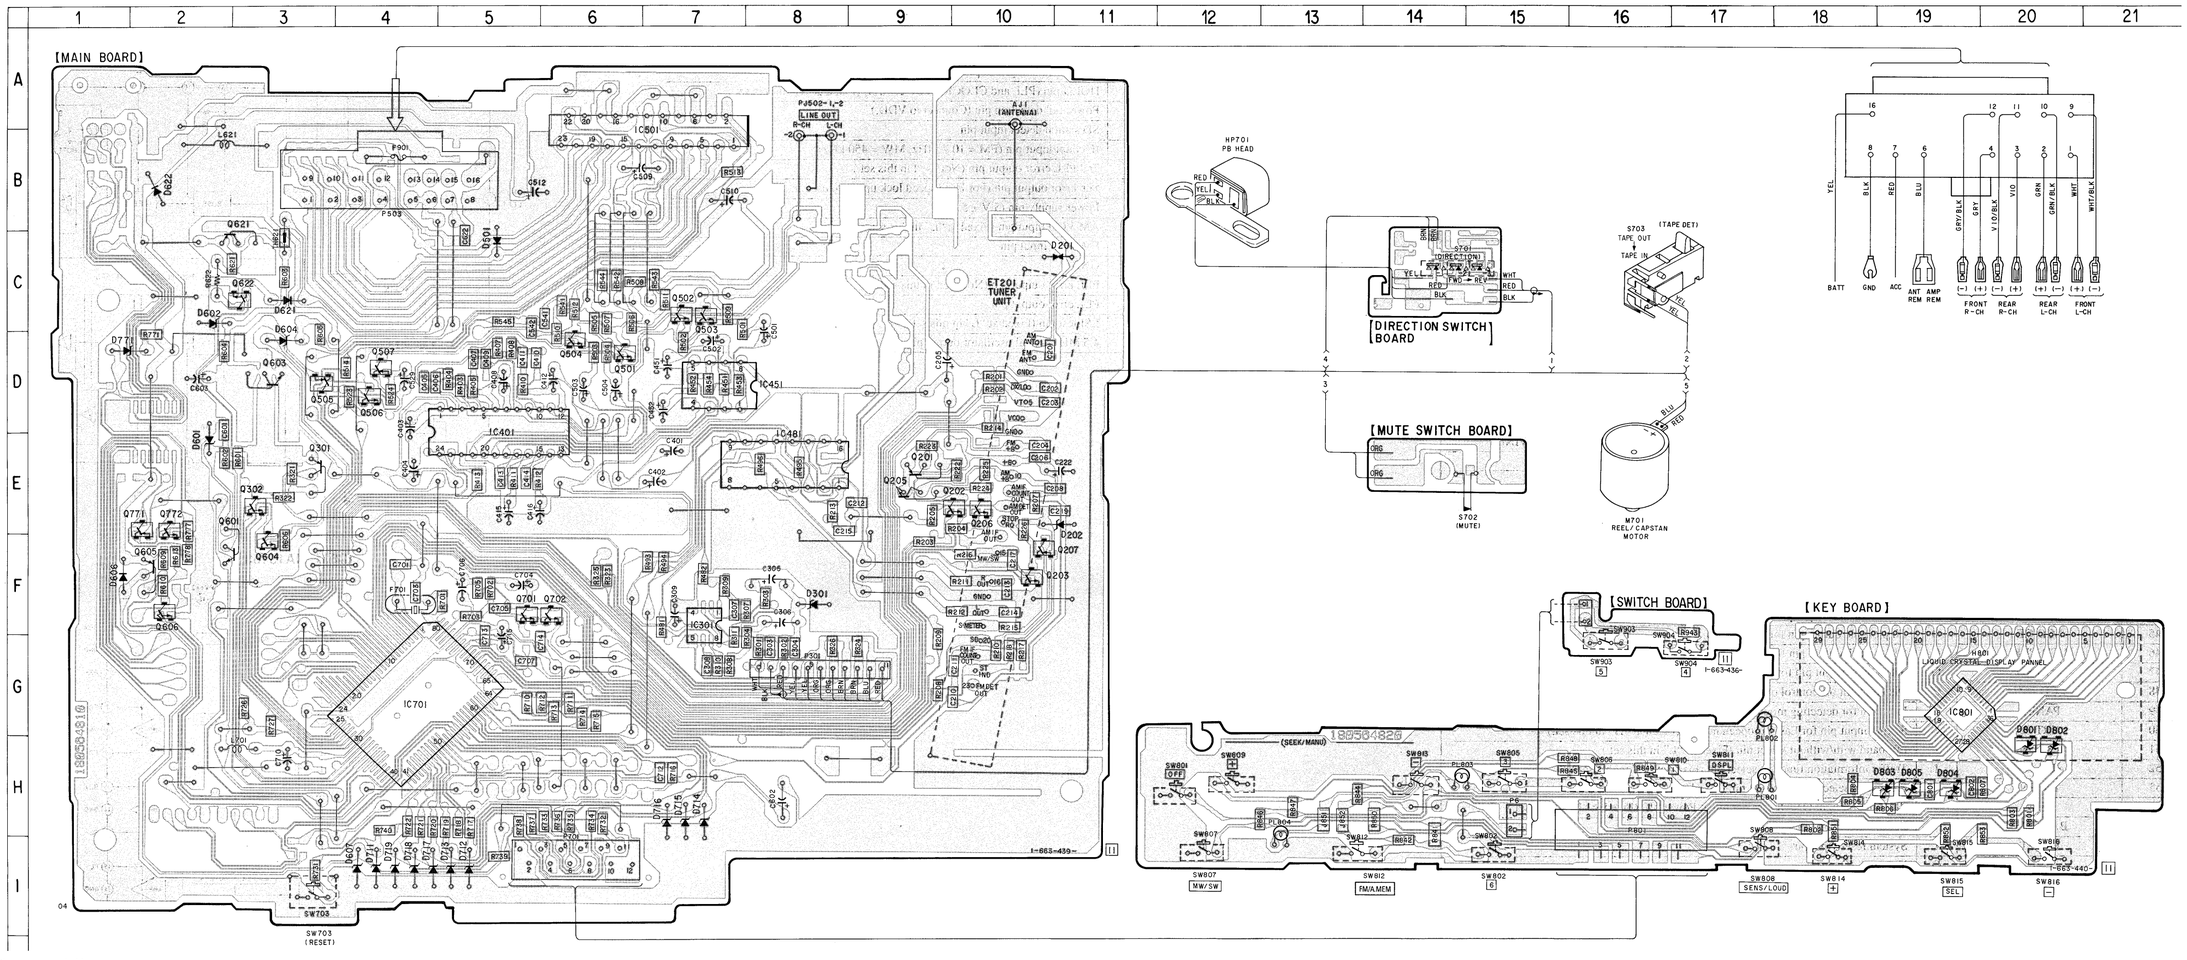

5-3. SCHEMATIC DIAGRAM • Refer to page 17 for IC Block Diagrams.

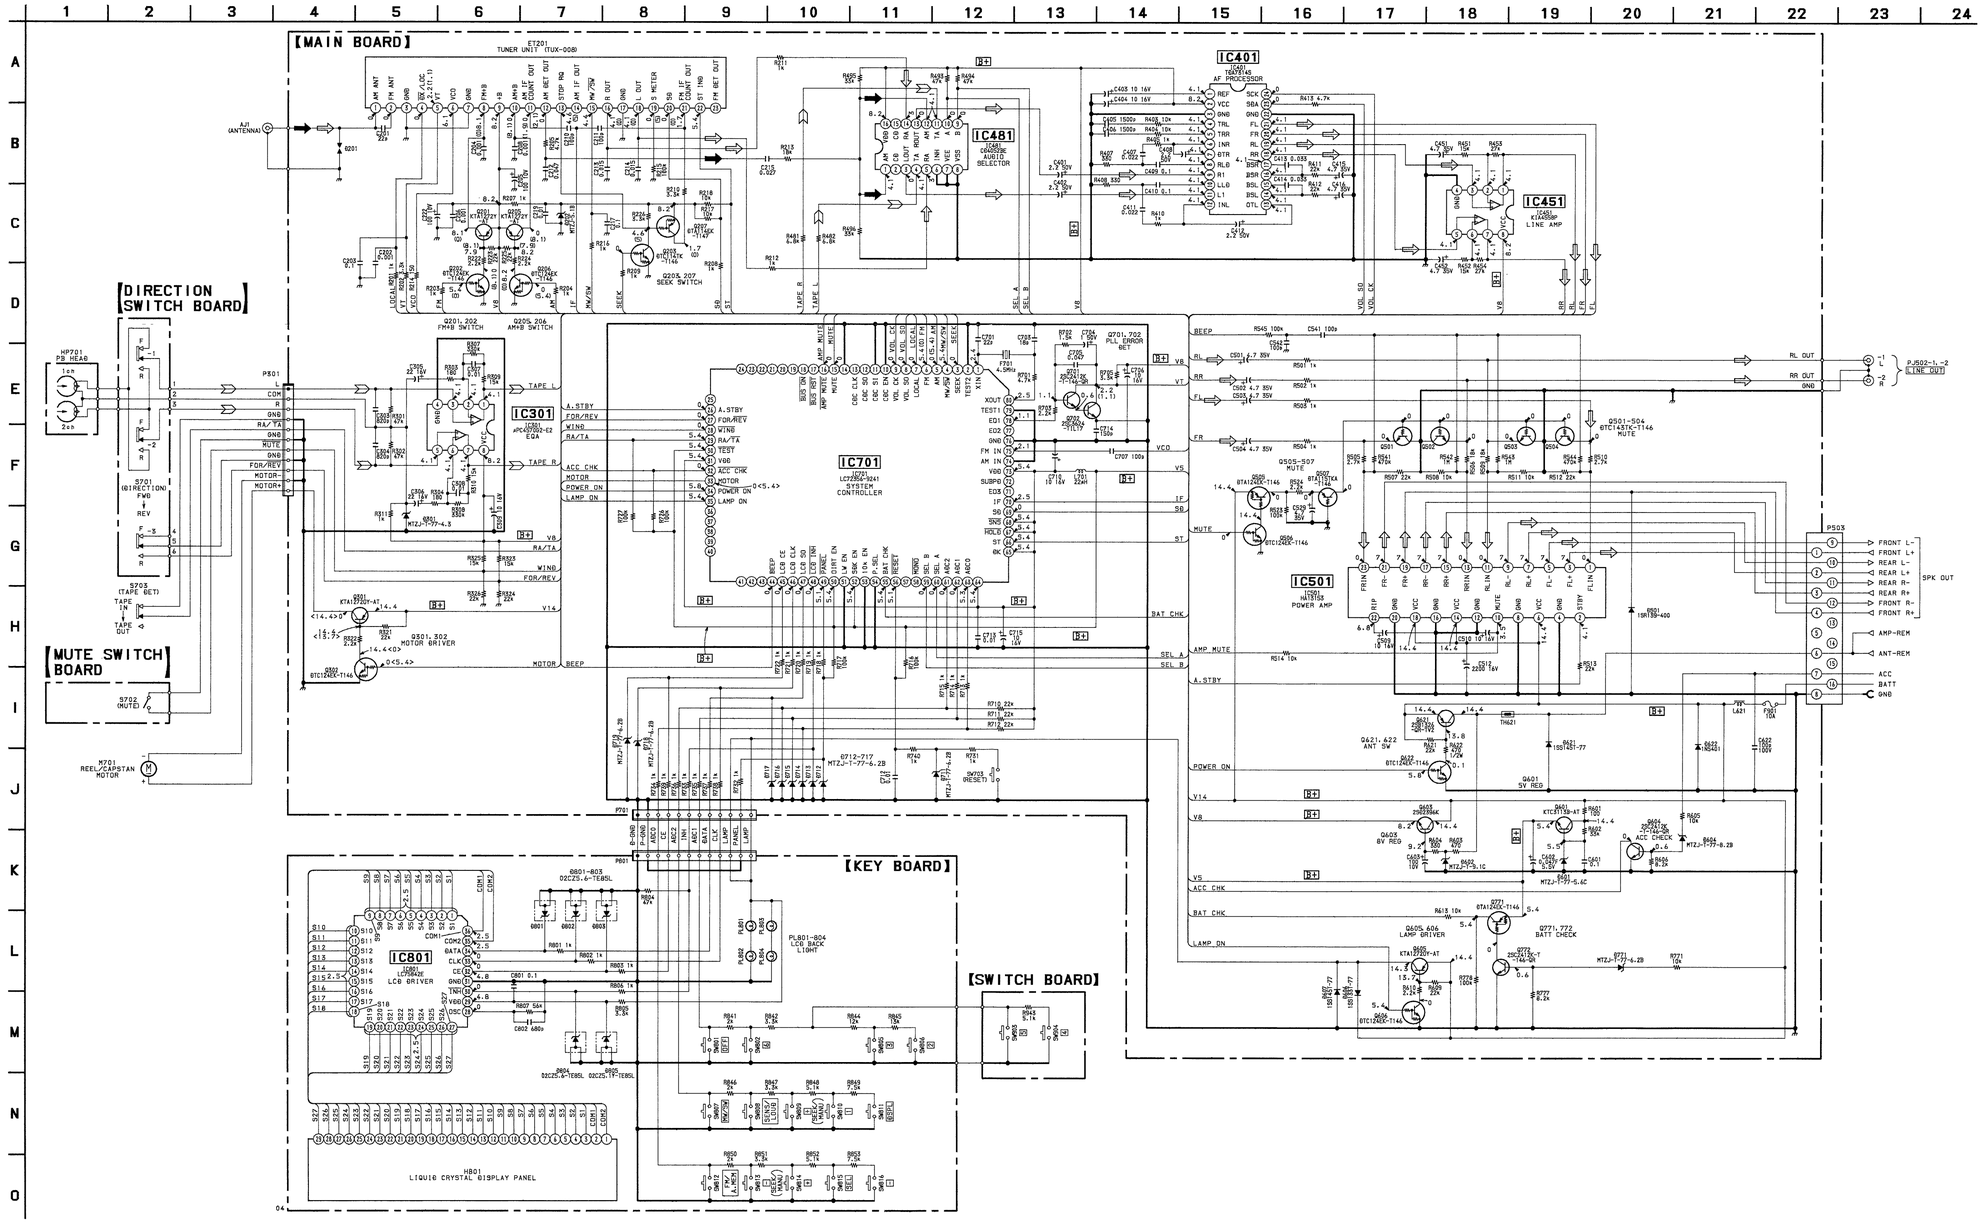

Note :
- All capacitors are in µF unless otherwise noted. pF : µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- B+ : B+ Line.
- Power voltage is dc 14.4 V and fed with regulated dc power supply from BATT and ACC terminals.
- Voltage is dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
  ( ) : MW
  < > : PB
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerance.
- Signal path.
  ⇨ : FM
  ➡ : MW
  ▱ : PB

SECTION 6
EXPLODED VIEWS

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE) ... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

6-1. CHASSIS SECTION

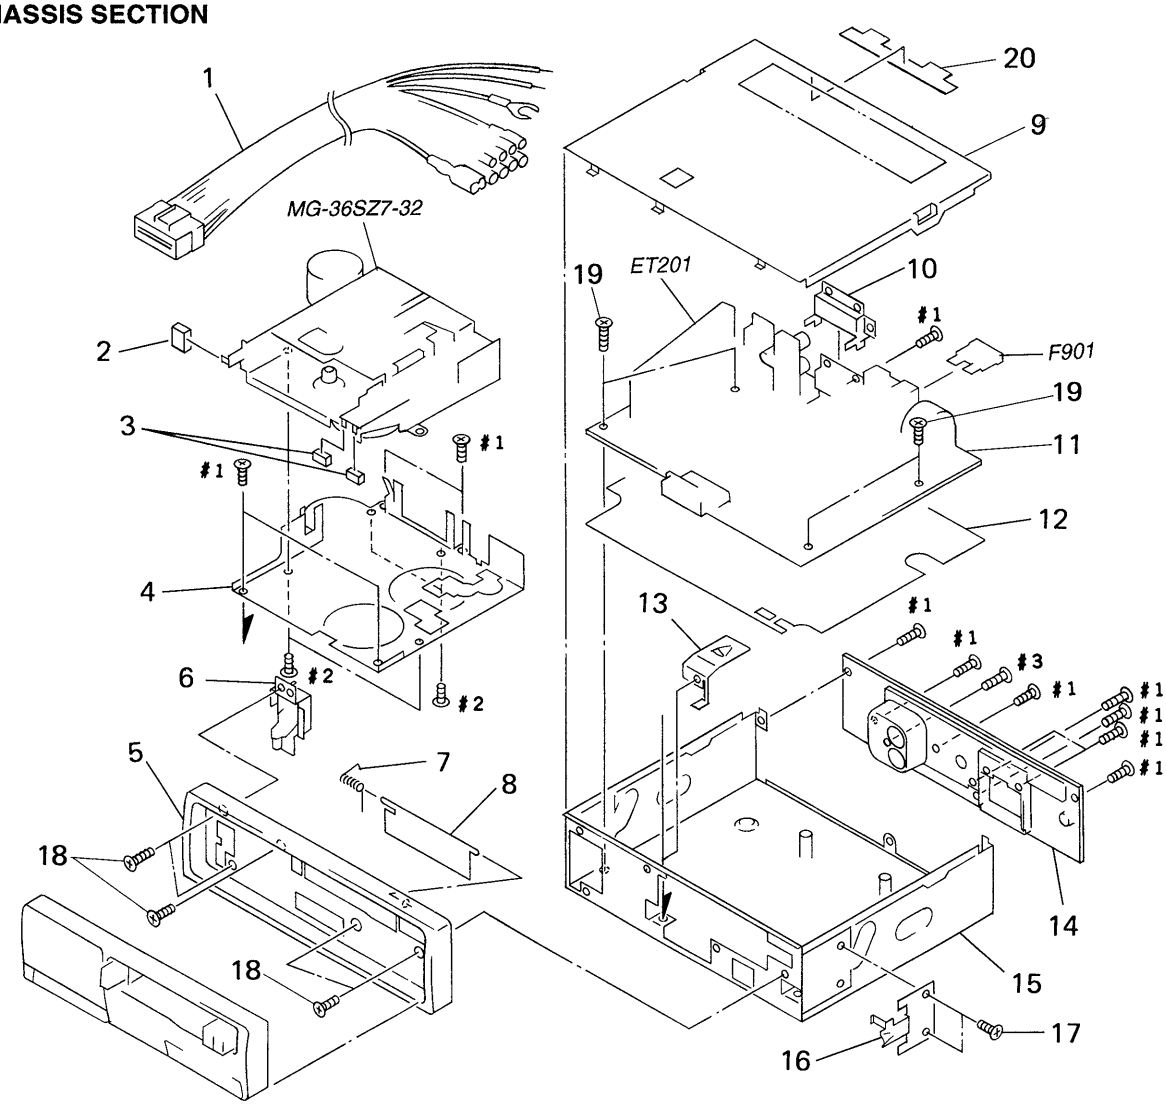

Ref. No.	Part No.	Description	Remark
1	1-776-207-31	CORD (WITH CONNECTOR) (POWER)	
2	3-937-528-01	COVER (EJECT)	
3	3-937-529-01	COVER (FF/REW)	
* 4	3-937-531-01	BRACKET (MD)	
5	3-937-525-01	PANEL, SUB	
6	X-3372-433-1	LOCK ASSY	
7	3-915-720-01	SPRING (C DOOR), TORSION	
8	3-937-526-01	DOOR, CASSETTE	
9	3-937-523-01	COVER	
* 10	3-937-533-01	BRACKET (IC)	
* 11	A-3294-159-A	MAIN BOARD, COMPLETE	
* 12	3-937-532-01	INSULATOR	
13	3-916-055-01	PLATE, LOCK	
* 14	3-008-361-01	HEAT SINK	
* 15	X-3372-423-1	CHASSIS ASSY	
16	3-916-056-01	PLATE (R), LOCK	
17	3-344-561-21	SCREW (M4X4)	
18	3-916-975-11	SCREW (2.6X6) (BZN), +BTT	
19	3-916-976-01	SCREW (2.6X5) (CZN), +BTT	
* 20	3-939-569-01	SHEET (VIBRATION PROOF)	
ET201	A-3282-019-A	TUNER UNIT (TUX-008)	
F901	1-533-330-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	

6-2. FRONT PANEL SECTION

SEE ADDITIONAL INFORMATION

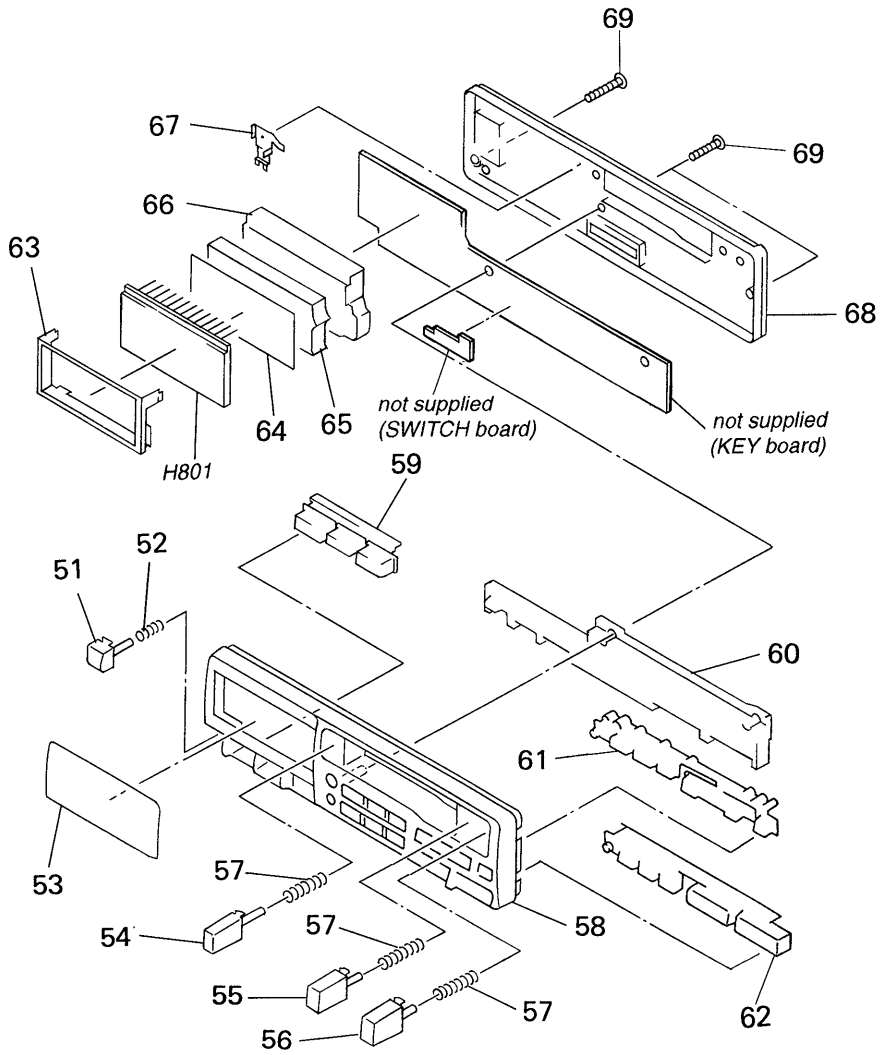

Ref. No.	Part No.	Description	Remark
51	3-937-551-01	BUTTON (RELEASE)	
52	3-937-553-01	SPRING (RELEASE)	
53	3-007-663-01	PLATE, INDICATION	
54	3-937-550-01	BUTTON (EJECT)	
55	3-937-549-01	BUTTON (REW)	
56	3-937-548-01	BUTTON (FF)	
57	3-937-632-01	SPRING (EJECT)	
58	3-007-658-01	PANEL, FRONT	
59	3-937-547-01	BUTTON (SEL)	
* 60	3-937-556-01	PLATE, LIGHT GUIDE	
61	3-939-884-01	BUTTON (SEEK/MANU)	
62	3-007-673-01	BUTTON (MW/SW)	
* 63	3-937-557-01	PLATE (LCD), GROUND	
* 64	3-937-560-01	SHEET (REFLECTOR)	
* 65	3-937-559-01	PLATE (LCD), LIGHT GUIDE	
66	3-937-558-01	HOLDER (LCD)	
67	3-937-555-01	PLATE (FP), GROUND	
68	3-937-554-01	PANEL, FRONT BACK	
69	3-916-981-11	SCREW (2X8) (BZN), +BTT	
H801	1-801-456-11	DISPLAY PANEL, LIQUID CRYSTAL	

6-3. MECHANISM SECTION (1)
(MG-36SZ7-32)

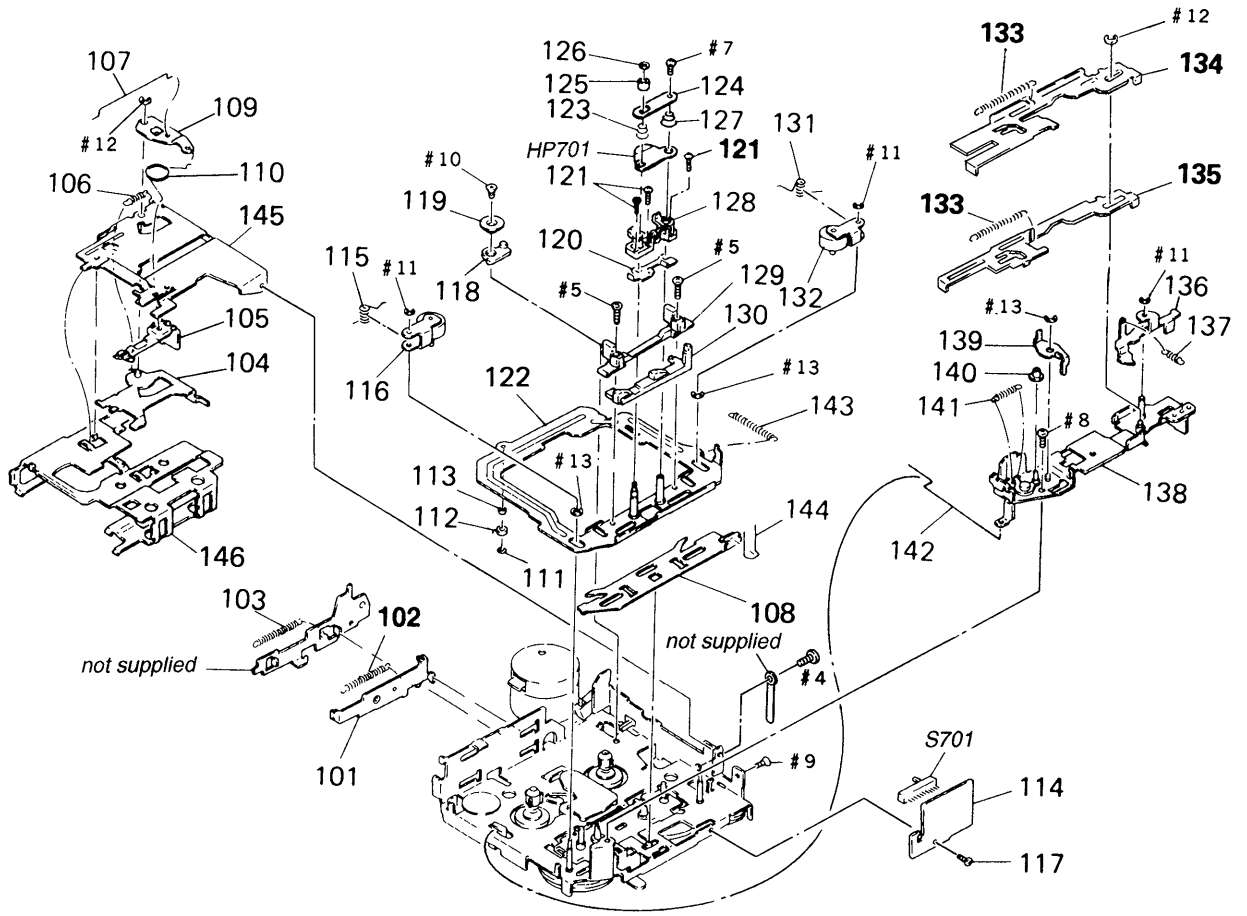

Ref. No.	Part No.	Description	Remark
101	3-938-660-01	LEVER, EJECT	
102	3-392-950-01	SPRING	
103	3-392-951-01	SPRING	
* 104	3-392-921-01	LOCK ASSY, EJECT CAM	
105	3-392-972-01	HOOKER, TAPE	
106	3-392-953-01	SPRING	
107	3-392-969-01	LINK, RETURN	
* 108	3-392-919-01	ARM ASSY, F,R SELECTION	
* 109	3-392-932-01	PLATE, CENTER	
110	3-392-961-01	SPRING (B)	
111	3-570-615-02	POLY-WASHER (DIA.1.2)	
112	3-392-945-01	ROLLER (A), H.P	
113	3-392-942-01	ROLLER (B), H.P	
114	3-392-970-01	CHASSIS, SWITCH (DIRECTION SWITCH BOARD)	
115	3-392-958-01	SPRING (R)	
116	3-375-378-01	ARM (R) ASSY, PINCH	
* 117	4-908-792-11	SCREW (B2)	
118	3-372-244-01	ARM (N), MUTE	
* 119	3-397-427-01	COLLAR, MUTE ARM	
120	3-377-908-01	SHIM (X), ADJUSTOR	
121	3-375-379-01	SCREW, AZIMUTH	
* 122	3-392-975-05	PLATE ASSY (S), HEAD	
123	3-392-956-01	SPRING (A)	
* 124	3-392-930-01	RETAINER, SPRING	

Ref. No.	Part No.	Description	Remark
125	3-392-943-01	ROLLER, FF	
126	3-676-387-00	POLY-SLIDER (DIA.1.6)	
127	3-392-955-01	SPRING (A)	
* 128	3-379-142-01	ARM (B), ADJUSTOR	
129	3-392-984-02	GUIDE, TAPE	
130	3-377-909-02	LINK (X), ADJUSTOR	
131	3-392-957-01	SPRING (F)	
132	3-375-377-01	ARM (F) ASSY, PINCH	
133	3-392-948-01	SPRING	
134	3-938-658-01	LEVER, FF	
135	3-938-659-01	LEVER, REW	
* 136	3-392-935-01	ARM, LOCK	
137	3-392-917-01	SPRING	
* 138	3-372-242-01	BRACKET ASSY (D), LEVER	
* 139	3-392-933-01	LEVER (B), CHANGE	
140	3-392-994-01	ROLLER, PROGRAM	
141	3-392-954-01	SPRING	
142	3-372-243-01	LINK (B), SELECTOR	
143	3-392-952-01	SPRING	
144	3-392-962-01	SPRING	
145	3-375-383-01	HANGER (X), CASSETTE	
146	3-375-384-01	HOLDER (X), CASSETTE	
HP701	1-543-717-11	HEAD, MAGNETIC (PLAYBACK)	
S701	1-692-502-11	SWITCH, SLIDE (DIRECTION)	

6-4. MECHANISM SECTION (2)
(MG-36SZ7-32)

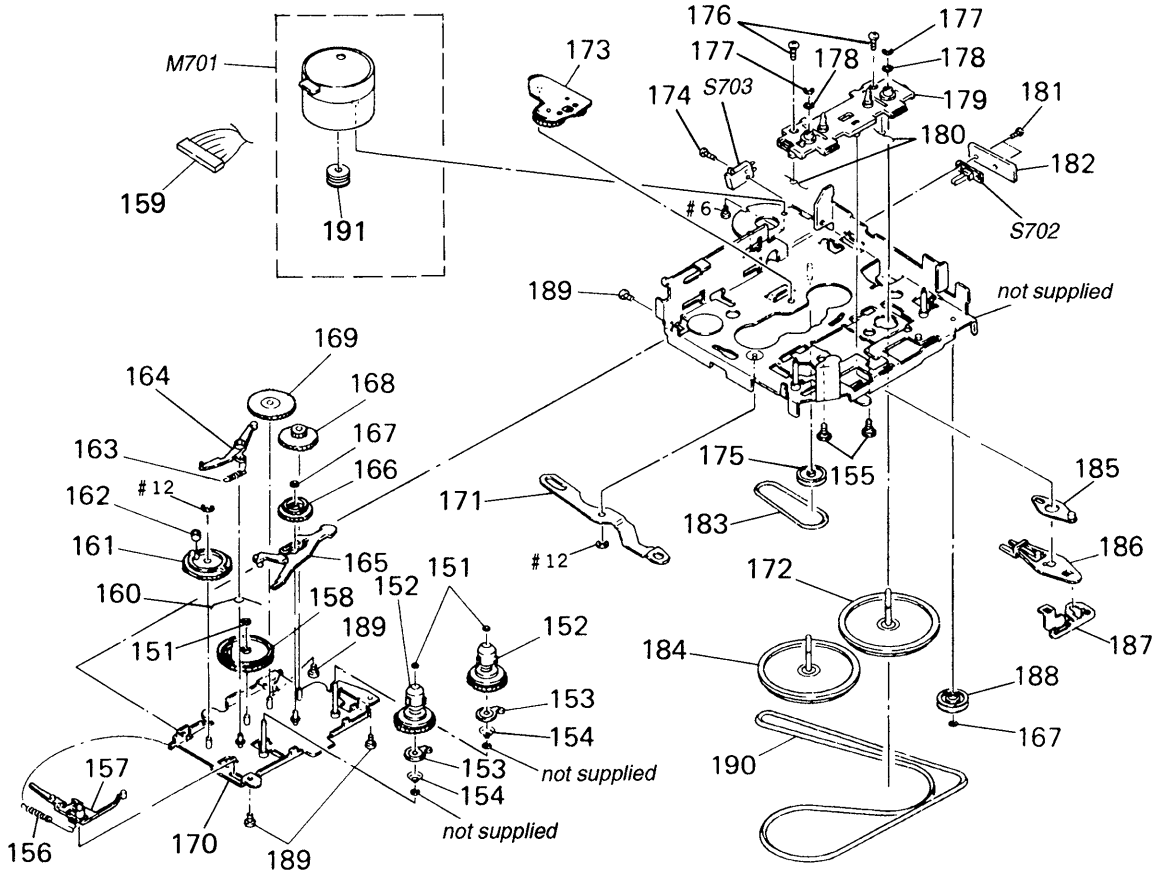

Ref. No.	Part No.	Description	Remark
151	3-676-387-00	POLY-SLIDER (DIA.1.6)	
152	3-376-196-01	SPINDLE ASSY (S), REEL	
153	3-375-380-01	CAM ASSY, DETECTION	
154	3-370-619-01	SPRING, BACK TENSION	
155	3-392-918-01	SCREW, EJECT HOOK	
156	3-392-959-01	SPRING	
157	3-392-985-02	RATCHET	
158	3-392-990-01	GEAR, DETECTION	
159	3-008-116-01	CORD ASSY, CONNECTOR	
160	3-392-960-01	SPRING	
161	3-392-987-01	GEAR, SELECTOR	
162	3-392-944-01	COLLAR (SELECTOR GEAR)	
163	3-375-131-01	SPRING, GEAR LOCK ARM	
164	3-392-989-02	ARM, GEAR LOCK	
165	3-392-986-01	ARM, SENSOR	
166	3-392-915-01	GEAR, IDLE	
167	3-570-615-02	POLY-WASHER (DIA.1.2)	
168	3-392-936-01	GEAR (A)	
169	3-392-937-01	GEAR (B)	
* 170	3-392-976-01	BASE ASSY, REEL	
* 171	3-392-979-01	LEVER, REVERSE	
172	3-392-926-02	FLYWHEEL ASSY (BF)	

Ref. No.	Part No.	Description	Remark
173	3-392-916-01	ARM ASSY, TU GEAR	
174	3-318-203-11	SCREW (B1.7X6), TAPPING	
175	3-392-938-01	GEAR, PULLY	
176	3-318-204-81	SCREW (M1.7X3), TAPPING	
177	3-590-768-00	RING (A), E	
178	3-701-437-11	POLY-SLIDER (A)	
* 179	3-375-381-01	BRACKET ASSY (X), CM	
180	3-392-963-01	SPRING (R)	
181	3-318-204-91	SCREW (M1.7X4), TAPPING	
182	3-375-376-01	MUTE (PWB) (MUTE SWITCH BOARD)	
183	3-375-375-02	BELT (C), SUB	
184	3-392-995-02	FLYWHEEL ASSY (BR)	
* 185	3-392-925-01	ARM (A) ASSY, F.R	
* 186	3-392-939-01	ARM, FF	
* 187	3-392-934-01	ARM (B), F.R	
188	3-392-941-01	PULLEY (A), IDLE	
* 189	4-908-792-11	SCREW (B2)	
190	3-392-967-01	BELT, MAIN	
* 191	3-392-913-01	PULLEY, MOTOR	
M701	X-3364-496-1	MOTOR ASSY (REEL/CAPSTAN)	
S702	1-692-065-11	SWITCH, LEAF (MUTE)	
S703	1-554-790-21	SWITCH, POWER (TAPE DET)	

SECTION 7
ELECTRICAL PARTS LIST

KEY

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : μ, for example:
  uA.. : μA.. uPA.. : μPA..
  uPB.. : μPB.. uPC.. : μPC.. uPD.. : μPD..
- CAPACITORS
  uF : μF
- COILS
  uH : μH

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
		KEY BOARD			
		**********			
*	3-937-557-01	PLATE (LCD), GROUND			
	3-937-558-01	HOLDER (LCD)			
*	3-937-559-01	PLATE (LCD), LIGHT GUIDE			
*	3-937-560-01	SHEET (REFLECTOR)			
		< CAPACITOR >			
C801	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C802	1-163-137-00	CERAMIC CHIP	680PF	5%	50V
		< DIODE >			
D801	8-719-025-31	DIODE 02CZ5.6-TE85L			
D802	8-719-025-31	DIODE 02CZ5.6-TE85L			
D803	8-719-025-31	DIODE 02CZ5.6-TE85L			
D804	8-719-025-31	DIODE 02CZ5.6-TE85L			
D805	8-719-043-82	DIODE 02CZ5.1Y-TE85L			
		< LIQUID CYRSTAL DISPLAY >			
H801	1-801-456-11	DISPLAY PANEL, LIQUID CRYSTAL			
		< IC >			
IC801	8-759-433-68	IC LC75842E			
		< JUMPER RESISTOR >			
J851	1-216-296-00	CONDUCTOR, CHIP	(3216)		
J852	1-216-296-00	CONDUCTOR, CHIP	(3216)		
		< CONNECTOR >			
P801	1-764-423-11	PIN, CONNECTOR 12P			
		< PILOT LAMP >			
PL801	1-517-626-11	LAMP, PILOT			
PL802	1-517-626-11	LAMP, PILOT			
PL803	1-517-626-11	LAMP, PILOT			
PL804	1-517-626-11	LAMP, PILOT			

Ref. No.	Part No.	Description			Remark
		< RESISTOR >			
R801	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R802	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R803	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R804	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R805	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R806	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R807	1-216-091-00	METAL CHIP	56K	5%	1/10W
R841	1-216-205-11	METAL GLAZE	2K	5%	1/8W
R842	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R844	1-216-075-00	METAL CHIP	12K	5%	1/10W
R845	1-216-076-00	METAL CHIP	13K	5%	1/10W
R846	1-216-056-00	METAL GLAZE	2K	5%	1/10W
R847	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R848	1-216-066-00	METAL CHIP	5.1K	5%	1/10W
R849	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
R850	1-216-056-00	METAL GLAZE	2K	5%	1/10W
R851	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R852	1-216-066-00	METAL CHIP	5.1K	5%	1/10W
R853	1-216-070-00	METAL CHIP	7.5K	5%	1/10W
		< SWITCH >			
SW801	1-554-813-41	SWITCH, KEY BOARD (OFF)			
SW802	1-554-813-41	SWITCH, KEY BOARD (6)			
SW805	1-554-813-41	SWITCH, KEY BOARD (3)			
SW806	1-554-813-41	SWITCH, KEY BOARD (2)			
SW807	1-554-813-41	SWITCH, KEY BOARD (MW/SW)			
SW808	1-554-813-41	SWITCH, KEY BOARD (SENS/LOUD)			
SW809	1-554-813-41	SWITCH, KEY BOARD (+ (SEEK/MANU))			
SW810	1-554-813-41	SWITCH, KEY BOARD (1)			
SW811	1-554-813-41	SWITCH, KEY BOARD (DSPL)			
SW812	1-554-813-41	SWITCH, KEY BOARD (FM/A.MEM)			
SW813	1-554-813-41	SWITCH, KEY BOARD (– (SEEK/MANU))			
SW814	1-554-813-41	SWITCH, KEY BOARD (+)			
SW815	1-554-813-41	SWITCH, KEY BOARD (SEL)			
SW816	1-554-813-41	SWITCH, KEY BOARD (–)			

****

MAIN

Ref. No.	Part No.	Description			Remark
*	A-3294-159-A	MAIN BOARD, COMPLETE			
		**********			
*	3-937-533-01	BRACKET (IC)			
	7-621-773-95	SCREW +B 2.6X6			
		< JACK >			
AJ1	X-3372-760-1	JACK ASSY, ANTENNA (ANTENNA)			
		< CAPACITOR >			
C201	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C202	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C203	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C204	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C205	1-124-443-00	ELECT	100uF	20%	10V
C206	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C208	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C210	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C211	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C212	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C213	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V
C214	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V
C215	1-163-986-00	CERAMIC CHIP	0.027uF	10%	25V
C217	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C219	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C222	1-124-584-00	ELECT	100uF	20%	10V
C303	1-163-139-00	CERAMIC CHIP	820PF	5%	50V
C304	1-163-139-00	CERAMIC CHIP	820PF	5%	50V
C305	1-126-514-11	ELECT	22uF	20%	16V
C306	1-126-514-11	ELECT	22uF	20%	16V
C307	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C308	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C309	1-126-157-11	ELECT	10uF	20%	16V
C401	1-124-257-00	ELECT	2.2uF	20%	50V
C402	1-124-257-00	ELECT	2.2uF	20%	50V
C403	1-126-157-11	ELECT	10uF	20%	16V
C404	1-126-157-11	ELECT	10uF	20%	16V
C405	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C406	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V
C407	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C408	1-124-257-00	ELECT	2.2uF	20%	50V
C409	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C410	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C411	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C412	1-124-257-00	ELECT	2.2uF	20%	50V
C413	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C414	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C415	1-126-163-11	ELECT	4.7uF	20%	50V
C416	1-126-163-11	ELECT	4.7uF	20%	50V

Ref. No.	Part No.	Description			Remark
C451	1-126-163-11	ELECT	4.7uF	20%	50V
C452	1-126-163-11	ELECT	4.7uF	20%	50V
C501	1-126-163-11	ELECT	4.7uF	20%	50V
C502	1-126-163-11	ELECT	4.7uF	20%	50V
C503	1-126-163-11	ELECT	4.7uF	20%	50V
C504	1-126-163-11	ELECT	4.7uF	20%	50V
C509	1-126-791-11	ELECT	10uF	20%	16V
C510	1-126-791-11	ELECT	10uF	20%	16V
C512	1-124-556-11	ELECT	2200uF	20%	16V
C529	1-126-163-11	ELECT	4.7uF	20%	50V
C541	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C542	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C601	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C602	1-125-701-11	DOUBLELAYERS	0.047F		5.5V
C603	1-124-584-00	ELECT	100uF	20%	10V
C622	1-164-162-11	CERAMIC CHIP	100PF	5%	100V
C701	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C703	1-163-099-00	CERAMIC CHIP	18PF	5%	50V
C704	1-126-160-11	ELECT	1uF	20%	50V
C705	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C706	1-126-157-11	ELECT	10uF	20%	16V
C707	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C710	1-126-157-11	ELECT	10uF	20%	16V
C712	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C713	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C714	1-163-121-00	CERAMIC CHIP	150PF	5%	50V
C715	1-126-157-11	ELECT	10uF	20%	16V
		< DISCHARGE GAP >			
D201	1-519-504-11	GAP, DISCHARGE			
		< DIODE >			
D202	8-719-921-43	DIODE MTZJ-5.1B			
D301	8-719-982-09	DIODE MTZJ-4.3			
D501	8-719-984-81	DIODE 1SR139-400			
D601	8-719-109-89	DIODE RD5.6ESB2			
D602	8-719-110-14	DIODE RD9.1ES-B3			
D604	8-719-110-08	DIODE RD8.2ES-B2			
D606	8-719-991-33	DIODE 1SS133T-77			
D607	8-719-061-04	DIODE 1SS145T-77			
D621	8-719-061-04	DIODE 1SS145T-77			
D622	8-719-061-05	DIODE 1N5401(N)			
D711	8-719-109-93	DIODE RD6.2ESB2			
D712	8-719-109-93	DIODE RD6.2ESB2			
D713	8-719-109-93	DIODE RD6.2ESB2			
D714	8-719-109-93	DIODE RD6.2ESB2			
D715	8-719-109-93	DIODE RD6.2ESB2			
D716	8-719-109-93	DIODE RD6.2ESB2			

SEE ADDITIONAL INFORMATION

MAIN

Ref. No.	Part No.	Description	Remark
D717	8-719-109-93	DIODE RD6.2ESB2	
D718	8-719-109-93	DIODE RD6.2ESB2	
D719	8-719-109-93	DIODE RD6.2ESB2	
D771	8-719-109-93	DIODE RD6.2ESB2	
		< TUNER >	
ET201	A-3282-019-A	TUNER UNIT (TUX-008)	
		< VIBRATOR >	
F701	1-578-785-11	VIBRATOR, CRYSTAL (4.5MHz)	
		< FUSE >	
F901	1-533-330-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
		< IC >	
IC301	8-759-106-02	IC uPC4570G2	
IC401	8-759-161-19	IC TDA7314S	
IC451	8-759-076-15	IC KIA4558P	
IC481	8-759-208-08	IC TC4052BPHB	
IC501	8-759-369-42	IC HA13153	
IC701	8-759-437-26	IC LC72356-9241	
		< COIL >	
L621	1-411-669-12	COIL, CHOKE	
L701	1-410-513-11	INDUCTOR 22uH	
		< CONNECTOR >	
* P301	1-506-993-11	PIN, CONNECTOR (PC BOARD) 11P	
P503	1-774-701-11	PIN, CONNECTOR 16P	
P701	1-764-422-11	PLUG, CONNECTOR 12P	
		< JACK >	
PJ502	1-778-536-11	JACK, PIN 2P (LINE OUT)	
		< TRANSISTOR >	
Q201	8-729-039-51	TRANSISTOR KTA1272Y-AT	
Q202	8-729-901-00	TRANSISTOR DTC124EK	
Q203	8-729-902-99	TRANSISTOR DTC114TK	
Q205	8-729-039-51	TRANSISTOR KTA1272Y-AT	
Q206	8-729-901-00	TRANSISTOR DTC124EK	
Q207	8-729-901-04	TRANSISTOR DTA114EK	
Q301	8-729-039-52	TRANSISTOR KTA1272OY-AT	
Q302	8-729-901-00	TRANSISTOR DTC124EK	
Q501	8-729-900-98	TRANSISTOR DTC143TK	
Q502	8-729-900-98	TRANSISTOR DTC143TK	
Q503	8-729-900-98	TRANSISTOR DTC143TK	
Q504	8-729-900-98	TRANSISTOR DTC143TK	
Q505	8-729-901-05	TRANSISTOR DTA124EK	
Q506	8-729-901-00	TRANSISTOR DTC124EK	
Q507	8-729-028-63	TRANSISTOR DTA115TKA-T146	
Q601	8-729-039-53	TRANSISTOR KTC3113B-AT	
Q603	8-729-021-82	TRANSISTOR 2SD2396K	
Q604	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q605	8-729-039-52	TRANSISTOR KTA1272OY-AT	
Q606	8-729-901-00	TRANSISTOR DTC124EK	
Q621	8-729-039-82	TRANSISTOR 2SB1326-QR-TV2	
Q622	8-729-901-00	TRANSISTOR DTC124EK	
Q701	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q702	8-729-422-29	TRANSISTOR 2SD601A-S	
Q771	8-729-901-05	TRANSISTOR DTA124EK	
Q772	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
		< RESISTOR >	
R201	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R202	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R203	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R204	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R205	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R207	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R208	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R209	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R210	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R211	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R212	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R213	1-216-079-00	METAL CHIP 18K 5% 1/10W	
R214	1-216-029-00	METAL CHIP 150 5% 1/10W	
R215	1-216-097-00	METAL GLAZE 100K 5% 1/10W	
R216	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R217	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R218	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R222	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R223	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R224	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R225	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R226	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R301	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R302	1-216-089-00	METAL GLAZE 47K 5% 1/10W	
R303	1-216-031-00	METAL CHIP 180 5% 1/10W	
R304	1-216-031-00	METAL CHIP 180 5% 1/10W	
R307	1-216-109-00	METAL CHIP 330K 5% 1/10W	
R308	1-216-109-00	METAL CHIP 330K 5% 1/10W	
R309	1-216-077-00	METAL CHIP 15K 5% 1/10W	
R310	1-216-077-00	METAL CHIP 15K 5% 1/10W	
R311	1-216-049-11	METAL GLAZE 1K 5% 1/10W	
R321	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R322	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	

MAIN

Ref. No.	Part No.	Description			Remark
R323	1-216-077-00	METAL CHIP	15K	5%	1/10W
R324	1-216-081-00	METAL CHIP	22K	5%	1/10W
R325	1-216-077-00	METAL CHIP	15K	5%	1/10W
R326	1-216-081-00	METAL CHIP	22K	5%	1/10W
R403	1-216-073-00	METAL CHIP	10K	5%	1/10W
R404	1-216-073-00	METAL CHIP	10K	5%	1/10W
R405	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R407	1-216-037-00	METAL CHIP	330	5%	1/10W
R408	1-216-037-00	METAL CHIP	330	5%	1/10W
R410	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R411	1-216-081-00	METAL CHIP	22K	5%	1/10W
R412	1-216-081-00	METAL CHIP	22K	5%	1/10W
R413	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R451	1-216-077-00	METAL CHIP	15K	5%	1/10W
R452	1-216-077-00	METAL CHIP	15K	5%	1/10W
R453	1-216-083-00	METAL CHIP	27K	5%	1/10W
R454	1-216-083-00	METAL CHIP	27K	5%	1/10W
R481	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R482	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R493	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R494	1-216-089-00	METAL GLAZE	47K	5%	1/10W
R495	1-216-085-00	METAL CHIP	33K	5%	1/10W
R496	1-216-085-00	METAL CHIP	33K	5%	1/10W
R501	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R502	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R503	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R504	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R505	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R506	1-216-079-00	METAL CHIP	18K	5%	1/10W
R507	1-216-081-00	METAL CHIP	22K	5%	1/10W
R508	1-216-073-00	METAL CHIP	10K	5%	1/10W
R509	1-216-079-00	METAL CHIP	18K	5%	1/10W
R510	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R511	1-216-073-00	METAL CHIP	10K	5%	1/10W
R512	1-216-081-00	METAL CHIP	22K	5%	1/10W
R513	1-216-081-00	METAL CHIP	22K	5%	1/10W
R514	1-216-073-00	METAL CHIP	10K	5%	1/10W
R523	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R524	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R541	1-216-113-00	METAL CHIP	470K	5%	1/10W
R542	1-216-121-00	METAL GLAZE	1M	5%	1/10W
R543	1-216-121-00	METAL GLAZE	1M	5%	1/10W
R544	1-216-113-00	METAL CHIP	470K	5%	1/10W
R545	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R601	1-216-025-00	METAL GLAZE	100	5%	1/10W
R602	1-216-085-00	METAL CHIP	33K	5%	1/10W
R603	1-216-041-00	METAL CHIP	470	5%	1/10W
R604	1-216-037-00	METAL CHIP	330	5%	1/10W
R605	1-216-073-00	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R606	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R609	1-216-081-00	METAL CHIP	22K	5%	1/10W
R610	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R613	1-216-073-00	METAL CHIP	10K	5%	1/10W
R621	1-216-081-00	METAL CHIP	22K	5%	1/10W
R622	1-247-232-11	CARBON	470	5%	1/2W
R701	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R702	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R703	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R705	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R710	1-216-081-00	METAL CHIP	22K	5%	1/10W
R711	1-216-081-00	METAL CHIP	22K	5%	1/10W
R712	1-216-081-00	METAL CHIP	22K	5%	1/10W
R713	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R714	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R715	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R716	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R717	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R718	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R719	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R720	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R721	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R722	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R726	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R727	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R731	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R732	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R733	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R734	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R735	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R736	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R737	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R738	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R739	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R740	1-216-049-11	METAL GLAZE	1K	5%	1/10W
R771	1-216-073-00	METAL CHIP	10K	5%	1/10W
R777	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R778	1-216-097-00	METAL GLAZE	100K	5%	1/10W

< SWITCH >

SW703	1-554-088-00	SWITCH, KEY BOARD (RESET)

< THERMISTOR >

TH621	1-809-148-11	THERMISTOR PTH8L07AR2R0M1B510

****

Ref. No.	Part No.	Description	Remark
		SWITCH BOARD	
		**********	
		< RESISTOR >	
R943	1-216-066-00	METAL CHIP 5.1K 5% 1/10W	
		< SWITCH >	
SW903	1-554-813-41	SWITCH, KEY BOARD (5)	
SW904	1-554-813-41	SWITCH, KEY BOARD (4)	
**********			
		MISCELLANEOUS	
		**********	
1	1-776-207-31	CORD (WITH CONNECTOR) (POWER)	
F901	1-533-330-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
HP701	1-543-717-11	HEAD, MAGNETIC (PLAYBACK)	
M701	X-3364-496-1	MOTOR ASSY (REEL/CAPSTAN)	
S701	1-692-502-11	SWITCH, SLIDE (DIRECTION)	
S702	1-692-065-11	SWITCH, LEAF (MUTE)	
S703	1-554-790-21	SWITCH, POWER (TAPE DET)	
**********			
		ACCESSORIES & PACKING MATERIALS	
		**********	
	3-858-021-41	MANUAL, INSTRUCTION (ENGLISH, ARABIC)	
	3-858-022-41	MANUAL, INSTRUCTION, INSTALL (ENGLISH, ARABIC)	
	X-3372-303-1	CASE ASSY	
**********			
		**********	
		HARDWARE LIST	
		**********	
#1	7-621-773-95	SCREW +B 2.6X6	
#2	7-621-775-10	SCREW +B 2.6X4	
#3	7-685-547-19	SCREW +BTP 3X10 TYPE2 N-S	
#4	7-621-775-08	SCREW +P 2.6X3	
#5	7-627-553-88	SCREW, PRECISION +P 2X7	
#6	7-621-255-15	SCREW +P 2X3	
#7	7-621-255-20	SCREW +P 2X4	
#8	7-621-255-25	SCREW +PTT 2X4 (S)	
#9	7-621-555-10	SCREW +K 2X3	
#10	7-621-591-00	SCREW +K 2X4	
#11	7-624-102-04	STOP RING 1.5, TYPE -E	
#12	7-624-104-04	STOP RING 2.0, TYPE -E	
#13	7-624-118-01	RING, RETAINING E-2.5	
**********			

Ref. No.	Part No.	Description	Remark
		PARTS FOR INSTALLATION AND CONNECTIONS	
		**********	
201	X-3368-734-1	FRAME ASSY, FITTING	
202	X-3372-372-1	SCREW ASSY	
203	1-776-207-31	CORD (WITH CONNECTOR) (POWER)	
204	7-682-560-04	SCREW +P 4X6	
205	1-575-616-21	CORD (WITH TERMINAL) (CHASSIS EARTH)	

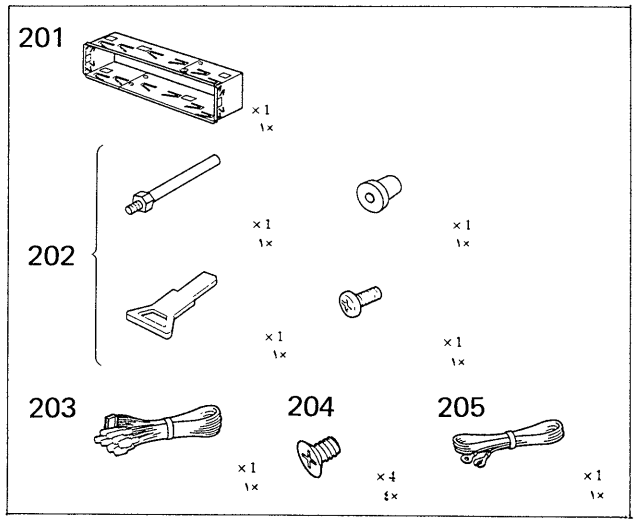

9-923-587-11

Sony Corporation
Personal & Mobile Communication Company

English
96H04044-1
Printed in Japan
©1996. 8
Published by Quality Assurance Dept.

XR-3304

SONY

Saudi Arabia Model

SERVICE MANUAL

CORRECTION-1

Correct your service manual as shown below.

☛ : indicates corrected portion.

Page	INCORRECT				CORRECT		
26	Ref. No.	Part No.	Description	Remark	Part No.	Description	Remark
	* 60	3-937-556-01	PLATE, LIGHT GUIDE		* 3-939-881-01	PLATE (BUTTON), LIGHT GUIDE	
	68	3-937-554-01	PANEL, FRONT BACK		3-939-882-01	PANEL, FRONT BACK	
31	IC701	8-759-437-26	IC LC72356-9241		8-759-446-48	IC LC72356-9256	

9-923-587-91

Sony Corporation
Personal & Mobile Communication Company

96L04049-1D
Printed in Japan ©1996. 12
Published by Quality Assurance Dept.